

WIND F68
三合一热插拔透明机械键盘

Product Features

- Fashionable design, PC transparent top and bottom cover, Gasket structure, feel delicate and soft elastic.
- Keypad and mechanical switch can be plugged, magnetic metal hidden storage receiver.
- With multimedia multifunction knob, can switch between office and game mode, convenient and quick.
- FN + I key combination to switch between 19 kinds of RGB lighting effects and turn off lighting effects, total 20 kinds of lighting effects.
- With the driver has music rhythm RGB light effect, there are 4 kinds of light effect modes available under this light effect.
- Wired mode and 2.4G wireless mode with driver, with custom function, macro definition
- Humanized design of the keyboard, adding a series of commonly used shortcut function keys in cooperation with Fn.
- Built-in 2800mAh high-capacity lithium battery can be cyclically charged with a power switch, environmental protection, effectively extending the endurance time.

Key combination function

- Note: In the 2.4G connection first search before inserting the receiver. Factory default has been on the code.
- BT mode BLE5.0 (AULA-F68-1/-2/-3) according to the BT version of the terminal device broadcast randomly, can be connected to three devices.
- FN+E=BT1, device name: AULA-F68-1 blue indication, blue light flashing, back to connect / connected to both blue light 2s, mode indicator at the constant light light off when sleep).
- FN+R=BT 2, Device name: AULA-F68-2 green indicator, green light flashing, green light for 2s when connect back/connect on, mode indicator is always on light off when sleep).
- FN+T=BT 3, Device name: AULA-F68-3 Orange indicator, orange light flashing, orange light for 2s when connect back/connect on, mode indicator is always on light off when sleep).
- FN+Y=wired mode, white light is always on at the mode indicator, white light is on for 2s at the Y key (the switch at the top left corner of the keyboard is the power switch).
- FN+Space = long press for three seconds = restore the default.
- FN+W = directional keys interchangeable.
- FN+I=Brightness+, FN+J=Brightness-, FN+=Speed-, FN+=Speed+
- FN+ESC = FN-Shift+ESC =
- Three independent indicators from left to right: charging indicator / CAP case indicator / mode indicator (2.4G-cyan / BT1-blue / BT2-green / BT3-orange / wired white).
- FN+TAB = switch the light effect color.
- FN+WIN-L = lock/open WIN-L window key (red light of WIN key indicates under WIN system when lock WIN).
- Switch to Mac system after WIN-L/AUL-L position swap (not lock WIN).
- Li-ion battery: 2800mAh rechargeable lithium battery
- Charging interface: Type-C interface
- Product weight: about 765g (without cable)
- Li-ion battery: 2800mAh rechargeable lithium battery
- Charging interface: Type-C interface
- Product size: 330.20x120.67x45.25x0.5mm
- Operating system: WIN XP/WIN7/WIN8/WIN10/Android/iOS/MAC

Shortcut key description

FN+	ESC	Shift+ESC	TAB	Q	W	E
Combination function	-	-	Light color switch	2.4G	Switching direction key	BT 1#
FN+	R	T	Y	I	I	V
Combination function	BT 2#	BT 3#	Wire	Brightness+	Brightness-	Light mode switching
FN+	CTRL-L	WIN-L	Space	--	--	U
Combination function	Digital and F-zone switching	Lock WIN	Restore default	Speed-	Speed+	PRTSC
FN+	I	O	J	K	L	Mode key
Combination function	SCRLK	PAUSE	INS	HOME	END	Turn off the knob light

Dual Mode Switch

- Long press the mode key to switch modes: game mode (knob indicator always on)

Office mode

- Short press mode key = multimedia function (mute)
- Knob clockwise = multimedia function (volume +)
- Knob counterclockwise = multimedia function (volume -)

Press FN+space to restore the factory default light mode, and the original connected Bluetooth device will not be cleared.

Switch to Android, press FN+left CTRL, left CTRL red light on, F zone function and digital interchange function.

Key	1	2	3	4	5	6
Single press, not combined with Fn	1	2	3	4	5	6
FN key combination	F1	F2	F3	F4	F5	F6
Key	7	8	9	0	-	++
Single press, not combined with Fn	7	8	9	0	-	++
FN key combination	F7	F8	F9	F10	F11	F12

Switch to Windows, restore the default left CTRL-L red light out, F zone function and digital interchange function.

Key	1	2	3	4	5	6
Single press, not combined with Fn	1	2	3	4	5	6
FN key combination	Home	Email	Switch windows	My computer	Brightness-Brightness+	
Key	7	8	9	0	-	++
Single press, not combined with Fn	7	8	9	0	-	++
FN key combination	Previous	Play/Pause	Next	Mute	Volume-	Volume+

Switch to Mac, press FN+ CTRL-L, CTRL-L red light on, F zone function and digital interchange function.

Key	1	2	3	4	5	6
Single press, not combined with Fn	1	2	3	4	5	6
FN key combination	Home	Email	Switch windows	My computer	Brightness-Brightness+	
Key	7	8	9	0	-	++
Single press, not combined with Fn	7	8	9	0	-	++
FN key combination	Previous	Play/Pause	Next	Mute	Volume-	Volume+

Installation and operation instructions

Computer system requirements:


- Wired/2.4G mode: WIN XP, WIN7, WIN8, WIN10 (In Win95, Win98 system, driver may be required).
- Wired mode / 2.4G receiver: configured with USB 1.1 or above port.
- BT mode (device name "AULA-F68-1/-2/-3"): WIN8, WIN10 and above systems.
- BT mode: MAC, computer, Android phone or tablet, IOS phone or tablet with BT BLE4.0, BLE5.0 and above hardware

Hardware connection

- Wired USB/2.4G receiver supports hot-swapping (plug and play).
- BT mode switch to the corresponding channel pair code, connect BT terminal device can be used.

Visual operating distance: ≤10m

Description of functions and indicators

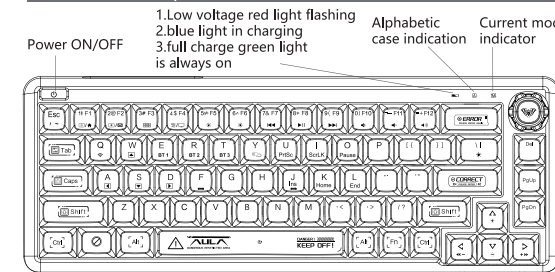

- 1. Low voltage red light flashing
- 2. Blue light in charging
- 3. Full charge green light is always on
- Alphabetic case indication
- Current mode indicator

Charging Instructions

- It is recommended to use only the computer (USB port) to charge the keyboard.
- Please do not use fast-charging mobile phone charger to charge the keyboard.
- Please do not use inferior non-standard power adapter to charge the keyboard.
- Please do not use over-voltage and over-current power adapter to charge the keyboard.
- When charging, please keep away from high temperature equipment.
- The indicator light is on when charging, the indicator light is off when fully charged.
- Please turn off the power switch when not in use for a long time.

The above charging instructions also apply to other devices with charging capabilities (keyboard/mouse/headphones/speakers, etc.)

Warranty notes

Dear users:
Thank you for purchasing tarantula series products! This warranty card is the three guarantee certificate of tarantula products, which is kept by users themselves. With this warranty card, you will enjoy the after-sales service provided by tarantula. This warranty card is one copy for each product. Please keep it properly.

One. With this card, you will enjoy the following rights and services:
1. Return service: within seven days after the product is sold, if the product has quality problems, according to the national "Three Guarantees service" regulations, the product will be returned to the seller or the place designated by tarantula when the appearance and packaging of the product are complete, and the payment for the product will be returned with the valid certificate at the time of purchase.
2. Warranty service: if the product performance failure occurs within 12 months from the date of purchase, it can be detected and confirmed by wolf spider after-sales service center, and can enjoy free maintenance service.

Two. The following situations are not within the scope of free service:
1. Beyond the specified warranty period;
2. Unable to show the valid quality assurance certificate of the product or the original serial number label of the product is altered, replaced or torn;
3. There is no serial number on the product or the product model on the warranty certificate is inconsistent with the product;
4. Failure damage caused by abnormal use, maintenance and storage;
5. Failure or damage caused by repair, change or disassembly of products by maintenance personnel not authorized by our company;
6. Failure or damage caused by accident or other force majeure;
7. Services other than the products promised by the sales staff and additional accessories or gifts are not included in the scope of this warranty service;
8. Failure or damage caused by unstable power supply and voltage.


User warranty card

Sales record:

User information	User (name / unit)
Telephone/E-mail	
Mailing address and zip code	
Sales information	Sales unit
Sales unit address	
contact number	Postal Code
Product model	
Seller's seal	Sales date

Maintenance record:

Maintenance date	Maintenance unit	Telephone	address



SOAI 狼蛛

产品特点

- 时尚的外观设计, PC透明上下盖, Gasket结构, 手感细腻软弹。
- 键帽和机械开关可插拔, 磁吸金属隐藏式收纳接收器。
- 带多媒体多功能旋钮, 可在办公与游戏模式切换, 方便快捷。
- FN+I组合键切换19种RGB灯效和关闭20种灯效。
- 配合驱动带音乐律动RGB灯效, 此灯效下有4种灯效模式可选。
- 有线模式与2.4G模式配合驱动, 带自定义功能, 宏定义。
- 键盘人性化设计, 与Fn组合增加一系列常用快捷功能按键。
- 内置2800mAh大容量锂电池可循环充电, 带电源开关, 环保节能, 有效延长续航时间。

组合按键功能

- FN+Q=2.4G 青色指示 通道广播时青色灯快闪, 回连/连上 指示灯长亮青色 2.4G连接方法: 按FN+Q组合键之后, Q键青色灯慢闪, 然后长按3秒FN+Q键青色灯快闪进入对码状态, 此时插入接收器完成对码, Q键青色灯亮2s, 2.4G连接成功, 注意2.4G连接成功时接收器指示灯, 默认已对码。
- 蓝牙模式BLE5.0 (AULA-F68-1/-2/-3) 根据终端设备的蓝牙版本随机广播, 可以连3个设备。
- FN+I=蓝牙1 设备名: AULA-F68-1 蓝色指示 通道广播时蓝光快闪, 回连/连上均为蓝色亮2s, 模式指示灯处常亮 (休眠时灭灯)。
- FN+R=蓝牙2 设备名: AULA-F68-2 绿色指示 通道广播时绿光快闪, 回连/连上均为绿色亮2s, 模式指示灯处常亮 (休眠时灭灯)。
- FN+T=蓝牙3 设备名: AULA-F68-3 橙色指示 通道广播时橙光快闪, 回连/连上均为橙色亮2s, 模式指示灯处常亮 (休眠时灭灯)。
- FN+Y=有线模式, 模式指示灯处白色常亮, Y键上白灯亮2s (键盘左上角开关为电源开关)。
- FN+Space=长按三秒= 恢复默认。
- FN+W=方向键互换。
- FN+I=亮度增加 FN+J=灯光亮度减少 FN+=速度减少 FN+=速度增加, FN+ESC= FN-Shift+ESC =
- 三个独立指示灯从左往右分别指示: 充电指示灯/CAP大小写指示灯/模式指示灯 (2.4G-青/BT1-蓝/BT2-绿/BT3-橙/有线-白)。
- FN+TAB=切换灯效颜色。
- FN+左WIN=锁定/打开左WIN窗口键 (锁WIN时WIN键红灯指示, 在WIN系统下)。
- 切换到Mac系统后左WIN/左ALT位置互换 (不锁WIN)。
- FN+= PRTSC FN+I = SCRLK FN+O = PAUSE FN+J = INS FN+K = HOME FN+L = END
- 低电压指示灯/红灯闪烁, 充电时蓝灯提示, 充满电时绿灯常亮。
- 带切换系统级驱动开关, 切换Android/Windows/Mac system。
- 蓝牙/2.4G模式下下一分钟无任何操作自动进入省电模式, 单击按键唤醒键盘。
- 查看键盘电量连接蓝牙可以在电脑上显示
- 键盘刷新了需要切换成有线模式, 刷完后重新插拔接收线和键盘左上角的开关重新开关。

标准快捷键说明

FN+	ESC	Shift+ESC	TAB	Q	W	E
组合功能	-	-	颜色切换	2.4G模式	切换方向键	蓝牙设备1#
FN+	R	T	Y	I	I	V
组合功能	蓝牙设备2#	蓝牙设备3#	有线模式	亮度+	亮度-	灯光模式切换
FN+	CTRL-L	WIN-L	Space	--	--	U
组合功能	数字与F区切换	锁WIN	恢复默认	速度+	速度-	PRTSC
FN+	I	O	J	K	L	模式键
组合功能	SCRLK	PAUSE	INS	HOME	END	关闭指示灯

双模式切换

- 长按模式键切换模式: 游戏模式 (旋钮指示灯呼吸) 办公模式 (旋钮指示灯常亮)

办公模式

- 短按模式键=多媒体功能 (静音)
- 旋钮顺时针=多媒体功能 (音量加)
- 旋钮逆时针=多媒体功能 (音量减)

按FN+空格恢复出厂默认灯光模式, 原来连接的蓝牙设备保存不会清除。

切换到Android, 按FN+左CTRL, 左CTRL红灯亮, F区功能与数字互换功能。

键位	1	2	3	4	5	6
单按	1	2	3	4	5	6
Fn 组合	F1	F2	F3	F4	F5	F6
单按	7	8	9	0	-	++
Fn 组合	F7	F8	F9	F10	F11	F12

切换到Windows, 按FN+左CTRL, 左CTRL红灯亮, F区功能与数字互换功能。

键位	1	2	3	4	5	6
单按	1	2	3	4	5	6
Fn 组合	主页	邮件	转换窗口	我的电脑	亮度-	亮度+
单按	7	8	9	0	-	++
Fn 组合	上一曲	播放/暂停	下一曲	静音	音量-	音量+

切换到Mac, 按FN+左CTRL, 左CTRL红灯亮, F区功能与数字互换功能。

键位	1	2	3	4	5	6
单按	1	2	3	4	5	6
Fn 组合	F1	F2	F3	F4	F5	F6
单按	7	8	9	0	-	++
Fn 组合	F7	F8	F9	F10	F11	F12

安装使用说明

电脑系统需求:

- 有线/2.4G模式: Windows ALL操作系统WIN XP, WIN7, WIN8, WIN10 (在Win95, Win98系统下, 可能需要驱动程序)。
- 有线模式/2.4G接收器: 配置有USB 1.1或以上版本端口。
- 蓝牙模式 (设备名称: "AULA-F68-1/-2/-3"): WIN8/WIN10及以上系统。
- 蓝牙模式: 需蓝牙BLE4.0, BLE5.0及以上硬件的MAC电脑, Android手机或平板, IOS手机或平板。

硬件连接

- 有线USB/2.4G接收器支持热插拔 (即插即用)。
- 蓝牙模式切换到对应通道, 对码连接蓝牙终端设备即可使用。

可视操作距离: ≤10m

功能及指示灯说明



- 1. 低电压红灯闪
- 2. 充电中黄灯
- 3. 充满绿灯常亮
- 大小写指示
- 当前模式指示灯

充电说明

- 建议仅使用电脑USB接口对键盘进行充电。
- 请勿使用劣质充电器对键盘进行充电。
- 请勿使用劣质非标准电源适配器对键盘进行充电。
- 请勿使用超过额定功率的电源适配器对键盘进行充电。
- 充电时请远离高温设备。
- 充电时请勿触摸充电器。
- 长时间不用时请关闭电源开关。

以上充电说明同样适用于其他带充电功能的设备 (键盘/鼠标/耳机/音箱等)。

保修事项说明

尊敬的用户:
感谢您购买狼蛛系列产品! 质保卡是狼蛛产品的三包凭证, 由用户自己保存。凭此质保卡您将享受狼蛛为提供的产品售后服务。此质保卡每个产品一份, 遗失不补, 敬请妥善保管。

一、凭此卡您将享受以下权利及服务:
1. 退换货服务: 自产品售出之日起七日内, 产品出现质量问题, 根据国家 "三包服务" 的规定, 在产品外观与包装完整的情况下, 将产品退还给销售商或狼蛛指定地点, 凭购买时的有效凭证, 退回您支付的产品货款。
2. 保修服务: 自购买日起12个月内出现产品性能故障情况经狼蛛售后服务中心检测确定, 可免费享受维修服务。

二、以下情况不属于免费服务范围:
1. 超出规定的质保期限;
2. 不能出示产品有效质保凭证或产品原序列号标签有涂改、替换、断裂等现象的;
3. 产品上没有序列号或质保凭证上的产品编号与产品实物不符的;
4. 非正常使用、维护、保管所导致的故障和损坏;
5. 非我公司授权的维修人员对产品修理、更改或拆卸而造成的故障或损坏;

6. 意外事故或其他不可抗力造成的故障或损坏;
7. 销售人员承诺的产品之外的售后服务及附加的配件或赠品不在本保修服务范围之内;
8. 因电源、电压不稳而导致的故障或损坏。

用户保修卡

销售记录:

用户(姓名/单位)	
电话/E-mail	
通讯地址及邮编	
销售单位	
联系电话	邮政编码
产品型号	
销售商印章	销售日期

维修记录:

维修日期	维修单位	电话	地址

说明书技术要求:
1.成品尺寸: 80x95mm
2.材质: 105g书写纸
3.工艺: 单黑双面印刷

