

Akko World Tour

3084/3068

Extended Manual



Table Of Contents

Introduction	3
Comments by Epomaker	3
Warranty Information	3
Where To Buy	3
Unboxing	4
Akko World Tour 3068	4
Akko World Tour 3084	4
Keyboard Specifications	5
Keyboard Combinations	5
Akko World Tour 3068	5
Akko World Tour 3084	6
Quick Startup	7
Charging Information	7
Bluetooth Preface	7
Wired Mode	7
Wireless Mode	7
Bluetooth Connection	8
Windows 10 Bluetooth	8
iOS Bluetooth Setup	10
MacOS Bluetooth	13
Macro Creation	15



Introduction

Comments by Epomaker

If you think any part of this manual needs correction, adjustment or updating, send the team a message at support@epomaker.com. You can also send a message there if you have any issues with your keyboard.

Warranty Information

Epomaker's Warranty covers any factory defects that might affect the proper functionality of your purchase. It doesn't cover any damage that may occur from normal wear and tear. If your product is defective we will send you a replacement unit. Replacement units might require you to send the defective unit back to Epomaker.

We provide a 1 year warranty for our products when bought from our website (Epomaker.com). Your item will not be covered by your 1 year warranty if the inspection shows any sign of modification or changes unsupported by the original product, these include: Changing internal components, Assembling and reassembling the product, Replacing Batteries, etc.

We will ONLY cover the item if it is bought from our stores, you do not have a warranty with us if you bought the item from another reseller or likewise. You are required to contact them to resolve issues.

Where To Buy

Website

<http://epomaker.com/>

Amazon US

<https://www.amazon.com/s?me=A31XCF3C216O31&marketplaceID=ATVPDKIKX0DER>

Amazon UK

<https://www.amazon.co.uk/s?k=EPOMAKER>

Amazon DE

<https://www.amazon.de/s?k=EPOMAKER>

Aliexpress

<https://www.aliexpress.com/store/5877346>



Unboxing

Akko World Tour 3068



- Akko World Tour 3068
- Dust Cover
- Novelty Keycaps
- Paw Keycap puller
- USB-C Cable to USB-A Cable

Akko World Tour 3084



- Akko World Tour 3068
- Dust Cover
- Novelty Keycaps
- Paw Keycap puller
- USB-C to USB-A Cable



Keyboard Specifications

Product Brand: Akko

Keyboard Layout: 68 keys or 84 Keys

Battery Capacity: 1800mAh

Interface Type: USB-C

Bluetooth Capable: Yes on Wireless Version

Product Weight: 0.78kg (3068) or 0.85kg (3084)

Product Dimensions: 312m*102mm*40mm (3064) or 315 x 126 x 38mm (3084)

Keyboard Combinations

Akko World Tour 3068

FN + 1	1
FN + 2	2
FN + 3	3
FN + 4	4
FN + 5	5
FN + 6	6
FN + 7	7
FN + 8	8
FN + 9	9
FN + 10	0
FN + 11	-
FN + 12	=
FN + i	Insert
FN + c	Calculator
FN + m	Turn on Volume/Mute
FN + w	Change WASD to Arrows



FN + ,	Decrease Volume
FN + .	Increase Volume
FN + Page Up	Home
FN + Page Down	End
FN + Left Win	Windows Key Lock
FN + Right Ctrl	Change Ctrl to Menu

Akko World Tour 3084

FN + F1	My Computer
FN + F2	Email
FN + F3	Windows Search
FN + F4	Home Page
FN + F5	Media Player
FN + F6	Play/Pause
FN + F7	Previous Song
FN + F8	Next Song
FN + i	Insert
FN + c	Calculator
FN + m	Turn On Volume/Mute
FN + w	Lock WASD to Arrows
FN + ,	Decrease Volume
FN + .	Increase Volume
FN + Left Win	Windows Key Lock
FN + Right Ctrl	Change Ctrl to Menu



Quick Startup

Charging Information

If the battery is low on the keyboard, the Tab key will light up with a pink LED to indicate that the keyboard is charging and in wired mode. This can not be turned off as it is a feature of the keyboard. When it is in Bluetooth mode, the light will be off.

Bluetooth Preface

Wired Mode

Disable the Connection mode to off. Connect the USB-A to USB-C cable. You will see the tab key light up a pink colour to show it is connected via USB.

Wireless Mode


Make sure the switch at the back is turned to “On”. You then will need to press down FN + Tab to go into Wireless mode. You should see the right light turn on, and the pink light behind the tab key will turn off. This indicates you have swapped to wireless mode.



Bluetooth Connection

Windows 10 Bluetooth

1. First, charge the keyboard via a USB port on your computer until it has decent charge.
2. Make sure the switch at the back is turned to “On” and the Connection Mode indicator is On at the back and disconnect the device from the keyboard. The keyboard is then ready to be paired.
3. First Press **FN + Tab** for three seconds, it will switch to the wireless mode when the third light is on at the top.

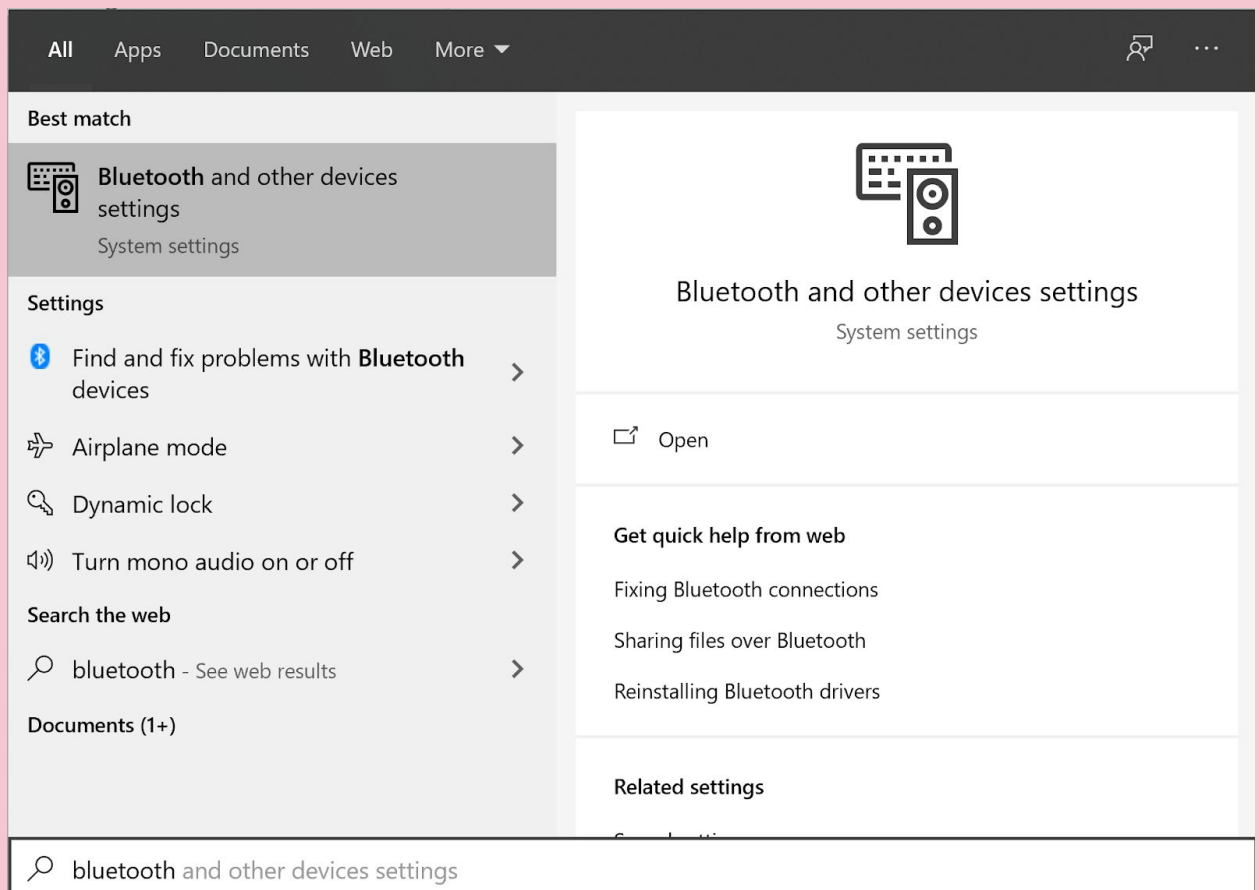

4. Press the windows key, and type “Bluetooth” into the search.
5. Select “Bluetooth and other device settings”

Bluetooth & other devices




Add Bluetooth or other device

Bluetooth




On

6. Select “Add Bluetooth or other device”

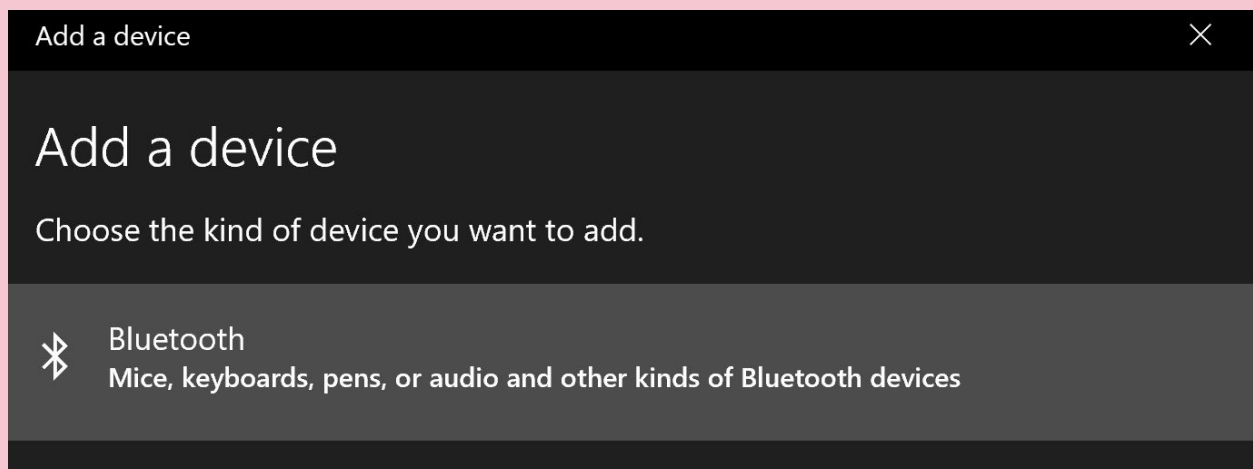


7. Select “Bluetooth” from the add devices section. Make sure your lighting at the top of the keyboard is still flashing. If it stops flashing, it means your device will not be seen in the Bluetooth list and you will need to press it again so it can be paired to.



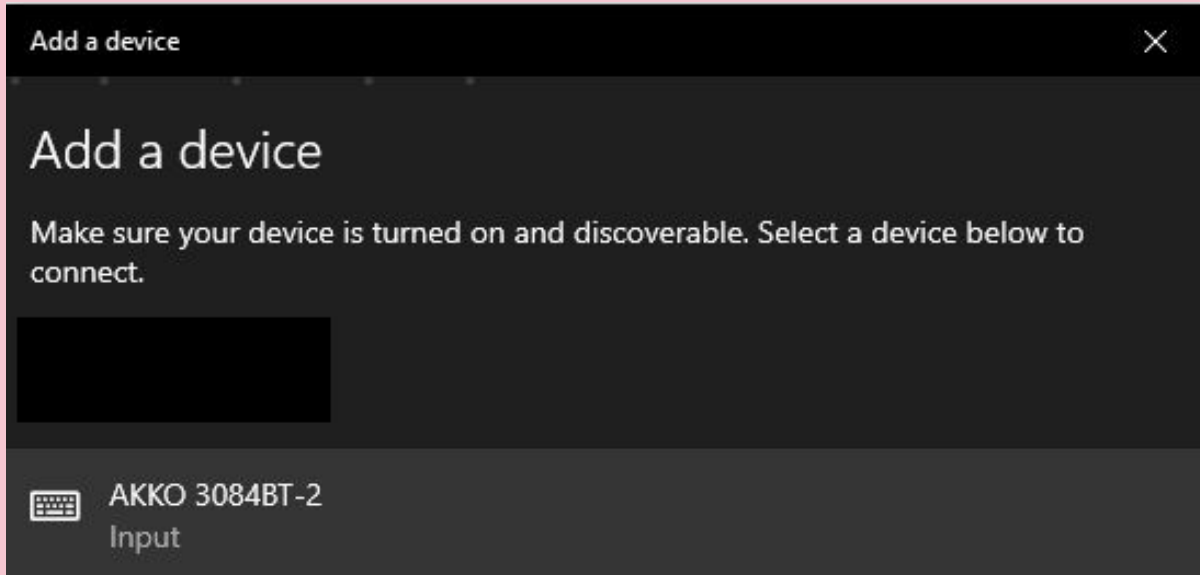

 8. Assign the device to a key. You can assign up to three devices using FN + E FN + R, or FN + T.
9. Select the “Keyboard” From the device selection, it might also appear as 3068BT-1/3068BT-2/3068BT-3 for the 3068 or 3084BT-1/3084BT-2/3084BT-3 .

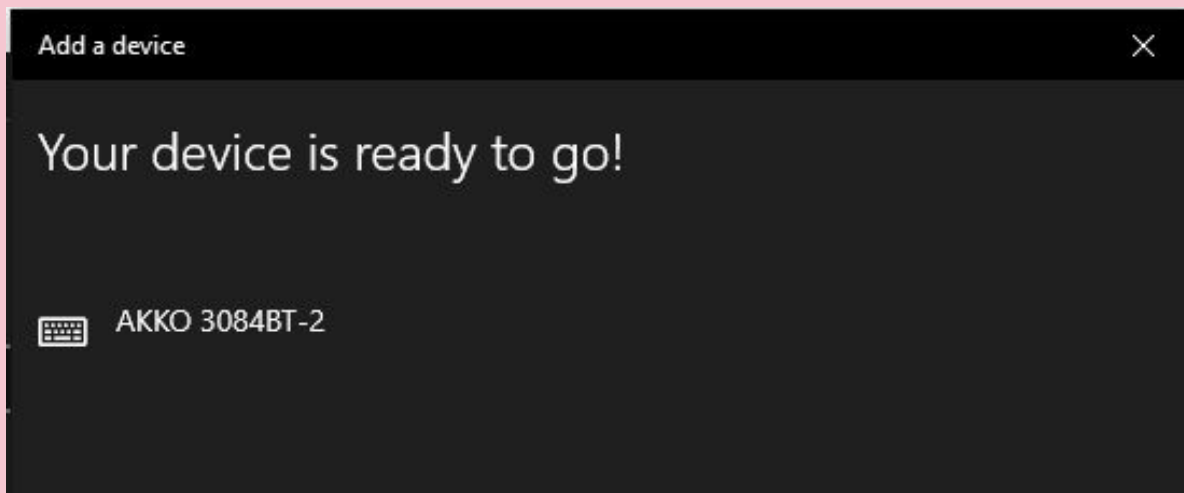


Your device will then be paired on that specific button. To disconnect/reconnect the keyboard, press the same button, the keyboard will remember the device it paired to. If you want to reset the devices, you can do so using **FN + ~**.

iOS Bluetooth Setup


1. First, charge the keyboard via a USB port on your computer until it has decent charge.
2. Make sure the switch at the back is turned to “On” and the Connection Mode indicator is On at the back and disconnect the device from the keyboard. The keyboard is then ready to be paired.




3. First Press **FN + Tab** for three seconds, it will switch to the wireless mode when the third light is on at the top.
4. Press the “Settings” Application from the home section on your iDevice.

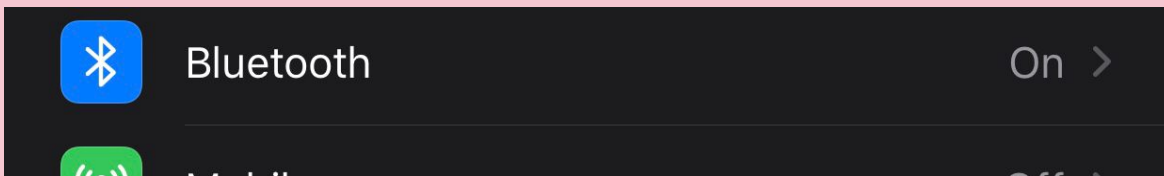

 5. Select “Bluetooth” from the Settings. Make sure it is on. Make sure that your device is considered discoverable.
6. Assign the device to a key. You can assign up to three devices using **FN + Q**, **FN + W**, or **FN + E**.

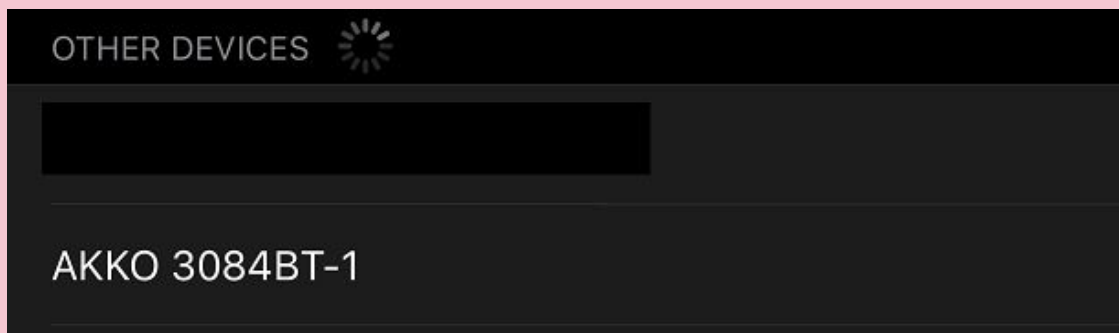


7. Select the “Keyboard” From the device selection, it might also appear as 3068BT-1/3068BT-2/3068BT-3 for the 3068 or 3084BT-1/3084BT-2/3084BT-3 .

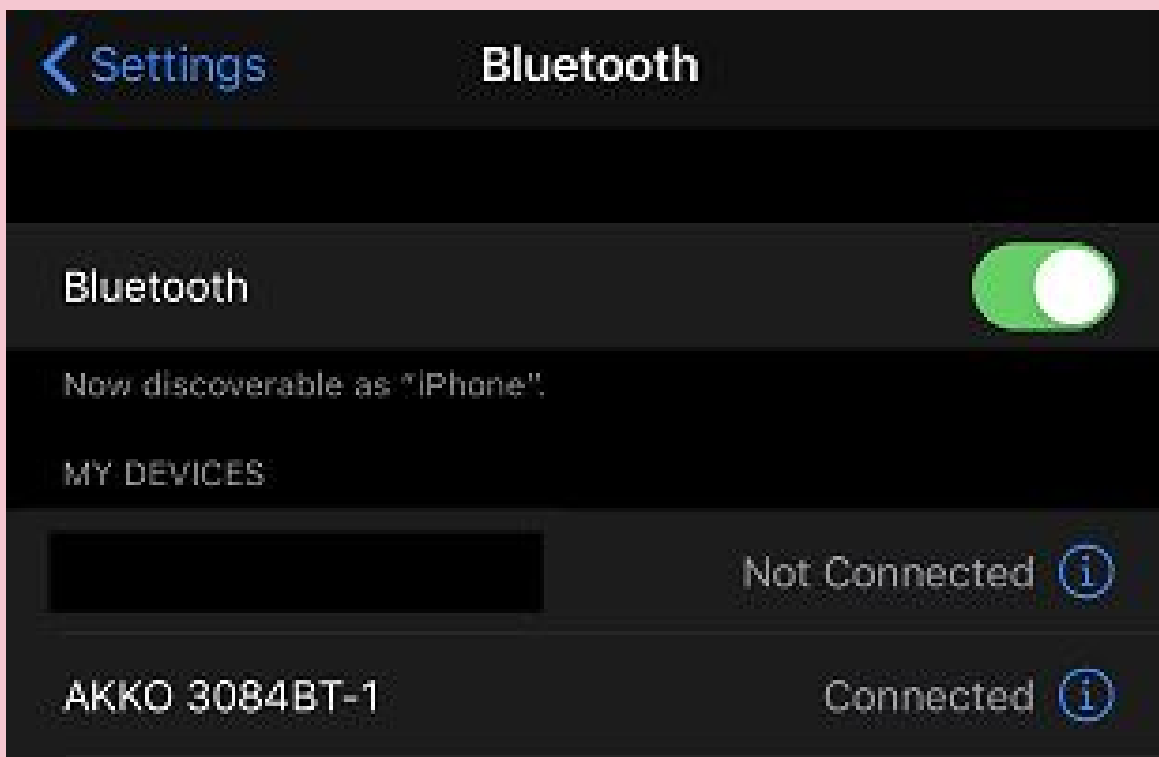

When your keyboard is connected to your iPhone, it should show as “Connected”. You should be able to type on it normally.



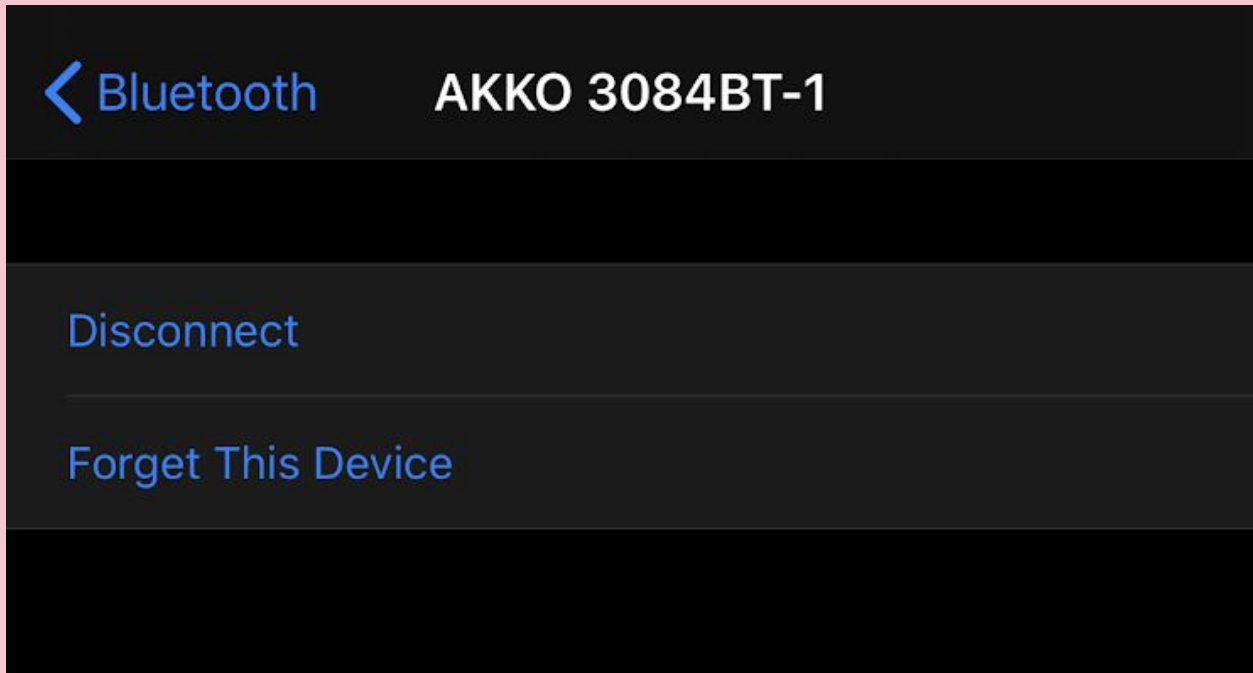


Note: If you want to disconnect the device, you can press the information icon on the side, and then select “Disconnect” or “Forget this device”. You can also reset the paired devices on the keyboard by doing **FN + ~**.




MacOS Bluetooth

 
Note: make sure your device is discoverable and turned on.

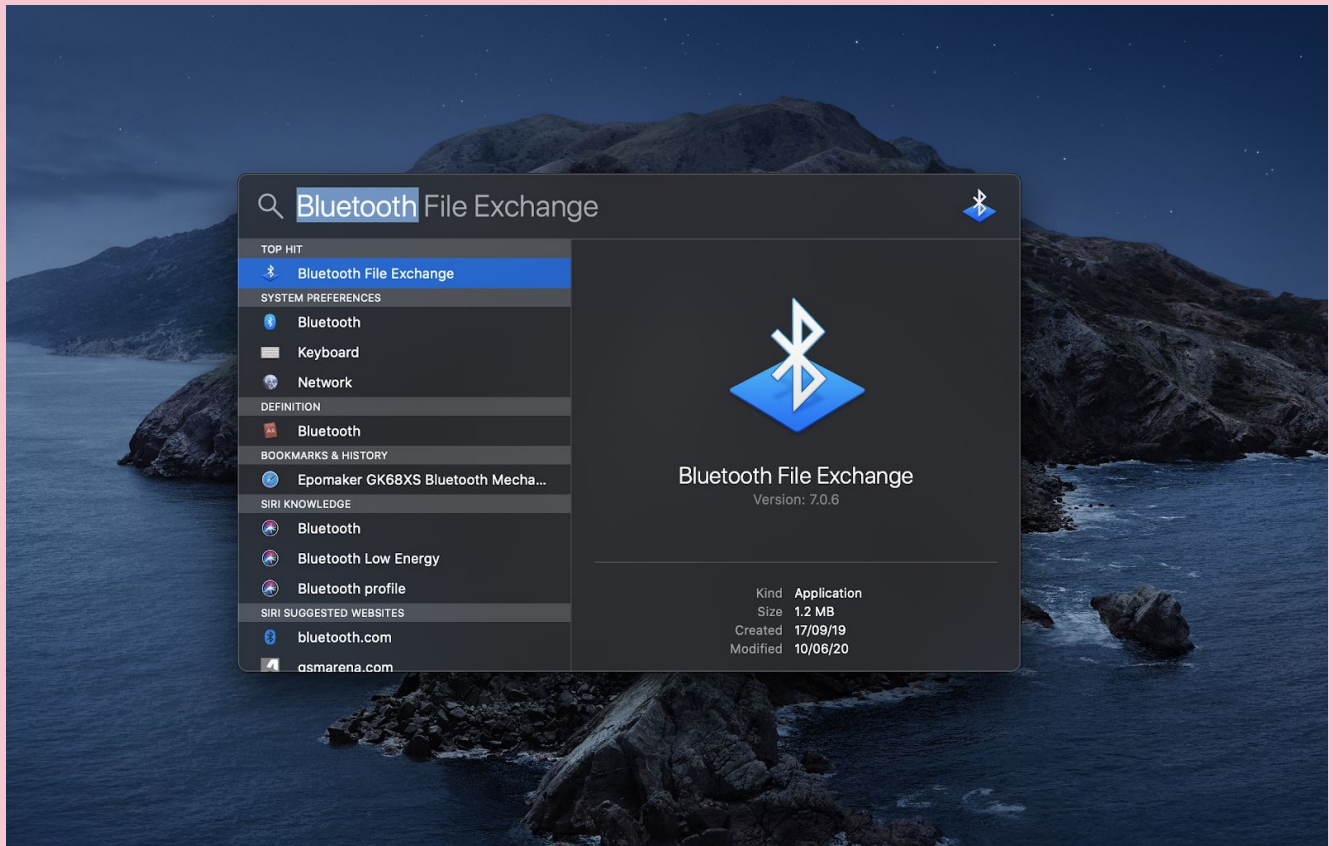

1. Press Command + Space to open Search
2. Type "Bluetooth" into the Spacebar, select "Bluetooth" (Don't select Bluetooth File Exchange).
3. First, charge the keyboard via a USB port on your computer until it has decent charge.
4. Make sure the switch at the back is turned to "On" and the Connection Mode indicator is On at the back and disconnect the device from the keyboard. The keyboard is then ready to be paired.
5. First Press **FN + Tab** for three seconds, it will switch to the wireless mode when the third light is on at the top.
6. First Press **FN + P**, It will flash a white colour indicating pairing mode.

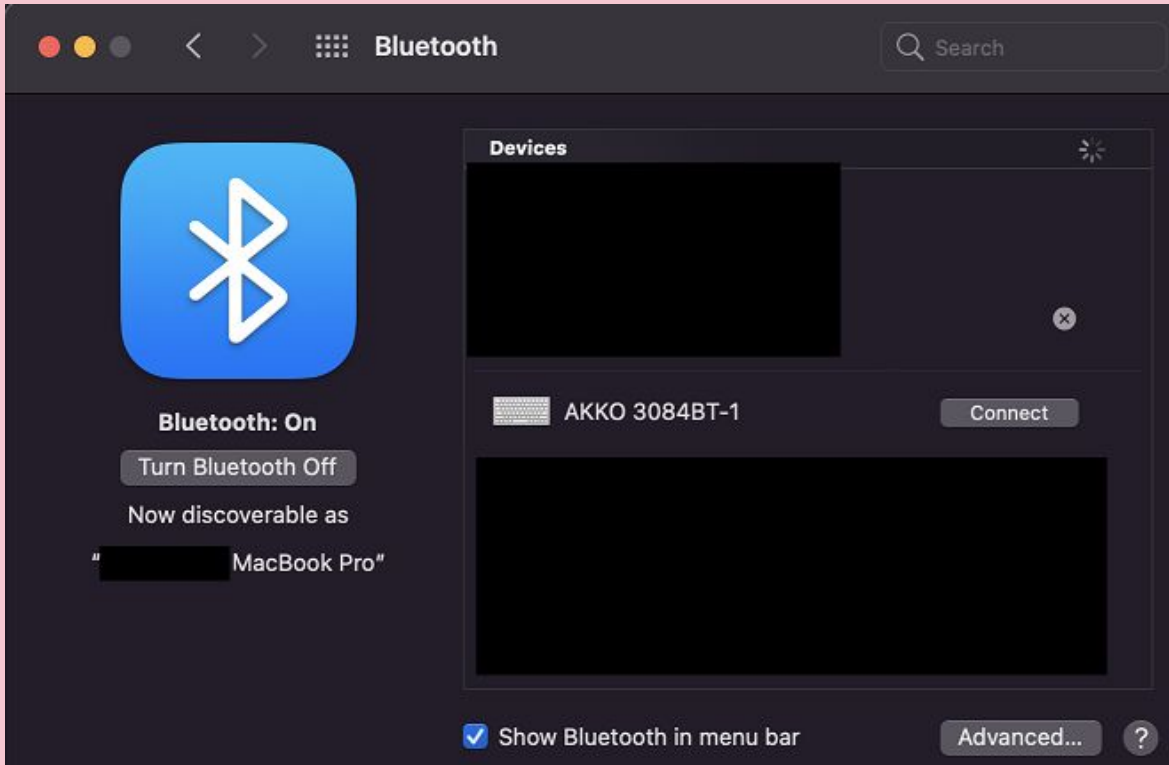

7. Select the "Keyboard" From the device selection, it might also appear as 3068BT-1/3068BT-2/3068BT-3 for the 3068 or 3084BT-1/3084BT-2/3084BT-3 .
8. Press "Connect" to connect to the keyboard.

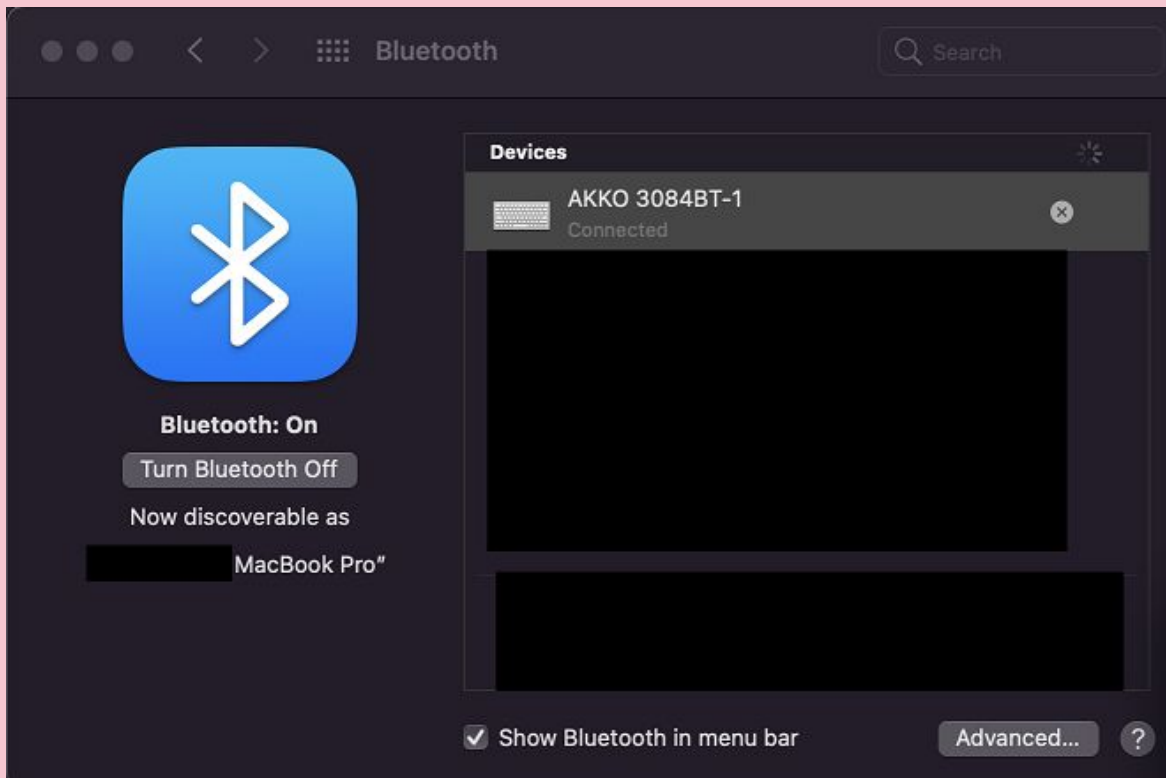

When your keyboard is connected to your iPhone, it should show as “Connected”. You should be able to type on it normally. You might get the keyboard assistant pop up, please go through it so the keyboard can be recognised.

Macro Creation

Firstly, some notes to consider. The Esc, Fn and Left Windows key can not be re-bound for a macro. This is because it is used in the macro creation. Also, it does not offer simultaneous execution of the macros. If you press two macros, it will execute the first macro and then the second macro. You also can not adjust the time between the execution of different macros.

If you want to clear your macros, you just need to long press **FN + The Key** to clear the macro after you enter the macro editor by pressing **FN + ESC**.

In this case, we will get the key “A” to program “abc”.

1. Long Press **FN + Left Windows Key** to enter macro mode for 3 seconds. If you restart your keyboard or disconnect it, it will exit macro mode.
2. Press **FN + ESC** to begin recording your macro.
3. Press **FN + The Key** you want to bind the macro to, in this case we want to bind to the “A” key, so we will press FN + A.
4. Press whatever you would like the macro to type out when you press it. In this case, we type “abc”.
5. Press **FN + The Key** you want to finish the sequence.
6. Press **FN + ESC** and long press **FN + Left Windows Key** to exit the macro editor to the default mode..

