

尺寸 330x700mm

材质:200克铜版纸/四色双面印刷/双面过哑膜

Alice60

CNC

CNC Full Wood Keyboard Triple Mode



— 用户手册 —

USER'S MANUAL

包装清单

ALICE60 * 3 拔轴键帽 * 1 手柄 * 3 三合一数据线 * 1 说明书 * 1

产品参数

品牌: FEKER
 产品名称: ALICE60-分体键盘
 产品结构: Gasket
 产品尺寸: 414 (P22)*217*58 (mm)(L/R)
 产品重量: 1044 (P22)*217*58 (g)(PAD)
 产品重量: =1600g(含手托)
 按键数量: 68Key
 连接方式: 有线-USB/蓝牙/2.4G
 线材长度: =1.8M
 接口: 键体分离式Type-C接口
 键帽: 全键无冲
 背光: 全键RGB, 19组灯效
 兼容性: Windows7/8/9/10/11/Mac/Linux

开关/指示灯说明

1. CAPS指示灯: A指示灯白光指示
2. Win指示灯: W键白光指示
3. Num指示灯: NUM键白光指示
4. 三档式灯效: 左键盲打/中键盲打/右键盲打

休眠机制与名称描述

1. 深度休眠: 无
2. 省电休眠: 键盘无连接操作100秒背光关闭, 按住任意键唤醒背光并连接蓝牙。
3. 产品名称: Alice60-L/Alice60-R/Alice60-Pad-1
 Alice60-L-2/Alice60-R-2/Alice60-Pad-2
 Alice60-L-3/Alice60-R-3/Alice60-Pad-3
4. 2.4G名称: Alice60-2.4G/Alice60-Pad-2.4G
 有线名称: Alice60-L/Alice60-R/Alice60-Pad

按键复合功能键说明

组合按键	WIN功能	MAC功能	描述
左Ctrl + ESC	短按 "-" 长按秒数位	短按 "-" 长按秒数位	-
左Ctrl + 11	F1	屏幕亮度减	-
左Ctrl + 2@	F2	屏幕亮度加	-
左Ctrl + 3#	F3	多任务控制键	-
左Ctrl + 4\$	F4	程序列表	-
左Ctrl + 5%	F5	无	-
左Ctrl + 6^	F6	无	-
左Ctrl + WIN	键WIN键	键WIN键	WIN键白灯
左Ctrl + T	键盘背光灯效调节	键盘背光灯效调节	长按退出出厂默认, 光之审判, 呼吸, 彩虹灯, 键回弹, 泛光灯, 踏雪无痕, 奔涌地心, 百花争艳, 极光涌动, 流星赶月, 火箭发射, 川流不息, 奔腾如龙左右逢源, 众志成城, 速度激情, 精英
左Ctrl + G	ON/OFF背光	ON/OFF背光	带记忆
左Ctrl + F	键盘氛围灯效调节	键盘氛围灯效调节	默认波浪

按键复合功能键说明

组合按键	WIN功能	MAC功能	描述
FN + 7&	F7	上一曲	-
FN + 8*	F8	播放/暂停	-
FN + 9	F9	下一曲	-
FN + 0)	F10	静音	-
FN + -	F11	音量减	-
FN + =	F12	音量加	-
FN + DEL	INS	INS	-
FN + HOME	END	END	-
FN + PGUP	Prnt	Prnt	-
FN + PGDN	Scroll	Scroll	-
FN + P	ON/OFF背光	ON/OFF背光	带记忆
FN + Back	长按秒数位	长按秒数位	-
FN + N	键盘背光灯效调节	键盘背光灯效调节	长按退出出厂默认, 光之审判, 呼吸, 彩虹灯, 键回弹, 泛光灯, 踏雪无痕, 奔涌地心, 百花争艳, 极光涌动, 流星赶月, 火箭发射, 川流不息, 奔腾如龙左右逢源, 众志成城, 速度激情, 精英
FN + Enter	键盘氛围灯效调节	键盘氛围灯效调节	默认波浪

按键复合功能键说明

组合按键	WIN功能	MAC功能	描述
NUM +	ON/OFF背光	ON/OFF背光	带记忆
ONUM +	键盘背光灯效调节	键盘背光灯效调节	长按退出出厂默认, 光之审判, 呼吸, 彩虹灯, 键回弹, 泛光灯, 踏雪无痕, 奔涌地心, 百花争艳, 极光涌动, 流星赶月, 火箭发射, 川流不息, 奔腾如龙左右逢源, 众志成城, 速度激情, 精英
NUM + 5	键盘氛围灯效调节	键盘氛围灯效调节	默认波浪
NUM + 6	长按秒数位	长按秒数位	-

模式连接说明

1. 蓝牙模式连接: 开关至蓝牙档位

2. 2.4G模式连接: 开关至2.4G档位

① Alice60-L: 左Ctrl+R
短按切换2.4G模式指示灯背光键回弹, 长按35指示灯背光快闪配对。

② Alice60-R: FN+O
短按切换2.4G模式指示灯背光键回弹, 长按35指示灯背光快闪配对。

③ Alice60-Pad: NUM+4
短按切换2.4G模式指示灯背光键回弹, 长按35指示灯背光快闪配对。

蓝牙连接指示灯说明

①. 蓝牙通道1: 短按切换蓝牙指示灯背光键回弹, 长按35指示灯背光快闪配对。
 ②. 蓝牙通道2: 短按切换蓝牙指示灯背光键回弹, 长按35指示灯背光快闪配对。
 ③. 蓝牙通道3: 短按切换蓝牙指示灯背光键回弹, 长按35指示灯背光快闪配对。

产品质保

感谢您对FEKER产品的信任与支持, 为了让您放心使用产品, 更好的保证您的权益, 我们将为您提供完善的售后服务。

质保日期: 自购买之日起质保期限为24个月, 质保期内, 配件不在保修范围内;

2. 服务内容: 按照计算机产品维修标准提供售后服务;

3. 不属于质保范围:

a. 已超出有效使用寿命或未经授权的;

b. 未按正确说明使用、维护、保管导致故障损坏的;

c. 由于不可抗力 (如自然灾害等) 原因造成的产品之不良;

d. 人为因素导致产品不良 (如操作失误、碰撞、进水、输入不合规电压等);

e. 一切人为损坏、自行拆机、耗材耗、使用不当等, 不在保修范围内。

质保卡

产品型号: _____

购买日期: _____

客户姓名: _____

联系电话: _____

质保地址: _____

执行标准: GB/T 14081-2010

FEKER官网: <https://www.fekergaming.com>

更多产品信息请关注

Alice60

CNC

CNC Full Wood Keyboard Triple Mode



— 用户手册 —

USER'S MANUAL

包装清单

ALICE60 keyboard * 3 Pulling shaft and key puller * 1 Hand rest * 3 Three in one data cable * 1 instructions * 1

Product parameter

Product brand: FEKER
 Product name: ALICE60- Split Keyboard
 Product structure: Gasket
 Product size: 414 (P22)*217*58 (mm)(L/R)
 Product size: 1044 (P22)*217*58 (g)(PAD)
 Product weight: =1600g (including hand rest)
 Number of keys: 68Key
 Connection mode: wired-USB/Bluetooth/2.4g
 Wire length: = 1.8m
 Interface: bond line separated type interface.
 Rectangular array: all keys without punching
 Backlight: full-color RGB, 19 groups of lighting effects
 Compatibility: Windows7/8/9/10/11/Mac/Linux

Description of switch/indicator light

1. CAPS indicator A indicator light indicates white light
2. Lock WIN indicator win key white light indicator
3. NUM indicator Num key indicates white light
4. Three-stage ratchet: push Bluetooth mode left/middle wired mode /push Bluetooth mode right.
5. Description of beacon function:
 - *: Wireless code checking indicator lamp
 - #: Low battery indicator /charging indicator

Dormancy mechanism and name description

1. Deep dormancy: none
2. Power-saving sleep: after 10 minutes of keyboard keyless operation, the backlight is turned off, press any key to wake up the keyboard backlight and connect back to Bluetooth.
3. product name: Alice60-L/Alice60-R-1/Alice60-Pad-1
 Alice60-L-2/Alice60-R-2/Alice60-Pad-2
 Alice60-L-3/Alice60-R-3/Alice60-Pad-3
 2.4G name: Alice60-2.4G/Alice60-Pad-2.4G
 Wired name: Alice60-L/Alice60-R/Alice60-Pad

Key function compound key description

combination	WIN function	MAC function	描述
Ctrl_L + ESC	Short press "-" and long press for 3 seconds to reset.	Short press "-" and long press for 3 seconds to reset.	-
Ctrl_L + 11	F1	Screen brightness reduction	-
Ctrl_L + 2@	F2	Screen brightness plus	-
Ctrl_L + 3#	F3	Multitask controller	-
Ctrl_L + 4\$	F4	Program list	-
Ctrl_L + 5%	F5	无	-
Ctrl_L + 6^	F6	无	-
Ctrl_L + WIN	Lock WIN key	键WIN键	WIN key lights up white light
Ctrl_L + T	Keyboard backlight effect adjustment	Keyboard backlight effect adjustment	19 kinds of lamp efficiency adjustment. Go with the flow by default
Ctrl_L + G	ON/OFF backlight	ON/OFF backlight	With memory
Ctrl_L + F	Keyboard atmosphere lighting effect adjustment	Keyboard atmosphere lighting effect adjustment	Default wave

Key function compound key description

Combination key	WIN function	MAC function	describe
FN + 7&	F7	Last song	-
FN + 8*	F8	Play/pause	-
FN + 9	F9	Next song	-
FN + 0)	F10	mute	-
FN + -	F11	Volume-	-
FN + =	F12	Volume+	-
FN + DEL	INS	INS	-
FN + HOME	END	END	-
FN + PGUP	Prnt	Prnt	-
FN + PGDN	Scroll	Scroll	-
FN + P	ON/OFF backlight	ON/OFF backlight	With memory
FN + Back	Long press for 2 seconds to reset.	Long press for 3 seconds to reset.	-
FN + N	Keyboard backlight effect adjustment	Keyboard backlight effect adjustment	19 kinds of lamp efficiency adjustment. Go with the flow by default
FN + Enter	Adjustment of keyboard atmosphere light effect	Adjustment of keyboard atmosphere light effect	Default wave

Key function compound key description

Combination key	WIN function	MAC function	describe
NUM +	ON/OFF backlight	ON/OFF backlight	带记忆
ONUM +	Keyboard backlight effect adjustment	Keyboard backlight effect adjustment	19 kinds of lamp efficiency adjustment. Go with the flow by default
NUM + 5	Adjustment of keyboard atmosphere light effect	Adjustment of keyboard atmosphere light effect	Default wave
NUM + 6	Long press for 3 seconds to reset.	Long press for 3 seconds to reset.	-

Mode connection description

1. Bluetooth mode connection: switch to Bluetooth gear.

2. 2.4G mode connection: switch to 2.4G mode.

① Alice60-Lctrl + R
Short press to switch 2.4G mode indicator light yellow light flashing back, long press for 3 seconds indicator light yellow light flashing pairing.

② Alice60-R:FN + O
Short press to switch 2.4G mode indicator light yellow light flashing back, long press for 3 seconds indicator light yellow light flashing pairing.

③ Alice60-Pad:Num + 4
Short press to switch 2.4G mode indicator light yellow light flashing back, long press for 3 seconds indicator light yellow light flashing pairing.

Bluetooth connection indicator description

①. Bluetooth channel 1: short press to switch Bluetooth 1 indicator light blue light slow flash back, long press for 3 seconds blue light flash pairing.
 ②. Bluetooth channel 2: short press to switch Bluetooth 2 indicator light green light slow flash back, long press for 3 seconds green light flash pairing.
 ③. Bluetooth channel 3: short press to switch Bluetooth 3 indicator light redn light slow flash back, long press for 3 seconds green light flash pairing.

产品质保

感谢您对FEKER产品的信任与支持, 为了让您放心使用产品, 更好的保证您的权益, 我们将为您提供完善的售后服务。

质保日期: 自购买之日起质保期限为24个月, 质保期内, 配件不在保修范围内;

2. 服务内容: 按照计算机产品维修标准提供售后服务;

3. 不属于质保范围:

a. 已超出有效使用寿命或未经授权的;

b. 未按正确说明使用、维护、保管导致故障损坏的;

c. 由于不可抗力 (如自然灾害等) 原因造成的产品之不良;

d. 人为因素导致产品不良 (如操作失误、碰撞、进水、输入不合规电压等);

e. 一切人为损坏、自行拆机、耗材耗、使用不当等, 不在保修范围内。

质保卡

产品型号: _____

购买日期: _____

客户姓名: _____

联系电话: _____

质保地址: _____

执行标准: GB/T 14081-2010

FEKER官网: <https://www.fekergaming.com>

更多产品信息请关注