


尺寸:140x80mm(单张)
材质:128铜板纸、折叠式单页

EPOMAKER x FAKER Galaxy80三模机械键盘

— 用户手册 — USER'S MANUAL

Galaxy80 产品参数

产品品牌: EPOMAKER x Feker
产品名称: Galaxy80
产品结构: 板簧Gasket结构
产品尺寸: 365.3x136.1x32.3mm
产品重量: ≈1710g
按键数量: 88Key
电池容量: 4000mAh
连接方式: 有线/USB/蓝牙/2.4G
线材长度: 1.8M
接口: 键线分离式typeC接口
矩阵: 全键无冲
背光: 全彩RGB, 19组灯效
兼容性: Windows7/8/9/10/11/Mac/Linux/Android/iOS

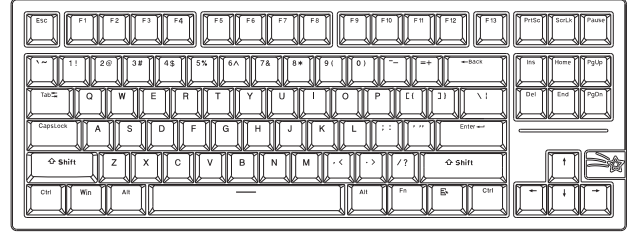

Galaxy80 指示灯说明

- MAC模式: 开关拨到MAC模式, 键盘背光灯一次蓝色
- WIN模式: 开关拨到Win模式, 键盘背光灯一次绿色
- ON模式: 开启键盘电源, 进入无线模式
- OFF模式: 关闭键盘电源, 进入有线模式
- CAPS指示灯: CAPS键白光指示
- 锁Win指示灯: WIN键白光指示
- 对码指示灯: 蓝牙1蓝灯/ 蓝牙2绿灯/蓝牙3红灯/2.4G黄灯
- 灯条: 默认RGB流光
- 模式连接指示灯:

指示灯设置	回连	配对	连接成功
BT1	横状灯条 蓝色慢闪	蓝色慢闪	常亮3秒后熄灭
BT2	横状灯条 绿色慢闪	绿色慢闪	常亮3秒后熄灭
BT3	横状灯条 红色慢闪	红色慢闪	常亮3秒后熄灭
2.4G	横状灯条 黄灯慢闪	黄灯慢闪	常亮3秒后熄灭

10. 充电/系统切换指示灯:

指示灯设置		指示方式
低电	FN指示灯	红灯快闪
充电	FN指示灯	红灯常亮开始充电
充满	FN指示灯	冲满后绿灯常亮60秒后, 进入默认跑马灯效
Mac/Win系统切换	键盘背光	MAC模式: 开关拨到MAC模式, 键盘背光灯一次蓝色 WIN模式: 开关拨到WIN模式, 键盘背光灯一次绿色

11. 低电指示:

无线模式下, 检测到电池低于等于3.1V时, 进入关机状态, 当插上有线充电后, 即可恢复正常使用。或者电池大于等于3.3V时, 即可正常使用。

Galaxy80 F13功能说明

F13键功能定义: 默认为F13键功能, 可驱动自定义功能

Galaxy80 休眠机制说明

- 深度休眠: 键盘无按键操作30分钟后深度待机, 蓝牙断开且休眠, 按任意键唤醒键盘背光并回连蓝牙。
- 省电休眠: 键盘无按键操作5分钟后背光关闭, 按任意键唤醒键盘背光并回连蓝牙。

Galaxy80 灯光效果说明

- 上电后, 灯光亮白光围绕键盘跑动, 拖尾熄灭, 跑完所有按键后, 恢复通电前灯光状态。
- 灯光效果的点亮顺序依表格从上到下, 最后切完模式后有OFF。
- 灯光效果, 19组灯效

静态恒亮 | 单点亮 | 单熄灭 | 繁星点点 | 漫天飞雪 | 百花争艳 | 动态呼吸 | 光谱循环 | 彩条涌动 | 多彩纵横 | 随便逐流 | 峰回路转 | 一触即发 | 一石二鸟 | 涟漪扩散 | 川流不息 | 重峦叠嶂 | 斜风细雨 | 来回穿梭

Galaxy80 模式连接说明

- 有线连接
开关拨到OFF档时即是有线连接模式;
有线模式, 拨动开关至OFF档, USB即插即用

2. 无线蓝牙连接

开关拨到ON档时连接蓝牙方式如下
FN+Q/W/E: 键盘拨ON后, 按下FN+Q/W/E进入蓝牙模式, 长按FN+Q/W/E组合键3S, 键盘进入对码状态, 蓝/绿/红指示灯快闪, 连上后指示灯常亮2S, 找不到配对设备30s后, 退出对码模式灯熄灭, 键盘进入睡眠。

3. 2.4G无线连接

将附送的2.4G无线接收器插到电脑主机USB接口, 再将键盘侧边开关拨到无线连接模式即可免驱连接使用; (需要做强制对码功能)
FN+R: 键盘拨ON后, 按下FN+R进入2.4G模式, 再按下FN+R组合键3S进入配对模式后, 插入接收器, 指示灯快闪, 配对成功后退出对码, 模式灯常亮3S, 找不到配对设备20s后, 退出对码模式灯熄灭, 键盘进入睡眠, 短按切换设备
注: 在任一种无线模式下接入USB接口可为设备充电


Galaxy80 按键复合功能说明

组合按键	WIN功能	MAC功能(单按触发)	描述
FN+F1	此电脑	屏幕亮度减	拨动开关选择MAC / WIN
FN+F2	主页	屏幕亮度加	
FN+F3	计算器	多任务控制器	
FN+F4	邮箱	程序列表	
FN+F5	播放器	无	
FN+F6	停止播放	无	
FN+F7	上一曲	上一曲	
FN+F8	播放/暂停	播放暂停	
FN+F9	下一曲	下一曲	
FN+F10	静音	静音	

组合按键	WIN功能	MAC功能(单按触发)	描述
FN+F11	音量减	音量减	拨动开关选择MAC / WIN
FN+F12	音量加	音量加	
FN+BAKSPACE	长按3S复位	长按3S复位	键盘背光灯三次白光表示
FN+	键盘背光颜色切换	键盘背光颜色切换	顺序: 七彩、红、橙、黄、绿、青、蓝、紫、白
FN+Enter	键盘背光灯效切换	键盘背光灯效切换	18种灯效, 默认随波逐流
FN+右Shift	切换指示灯灯效	切换指示灯灯效	光波、跑马、关闭、恒亮、呼吸、霓虹, 默认光波
FN+空格键	查询电量(无线模式下电池供电有效)	查询电量(无线模式下电池供电有效)	按下组合键FN+空格, 背光灯灭, 数字键1到0键亮灯显示电量占比, 例如: 1亮, 表示10%电量, 1和2亮, 表示20%电量, 以此类推。(30%以下红色, 50%以下黄色, 50%以上绿色)。
FN+T	键盘背光开关	键盘背光开关	带记忆
FN+WIN-L	锁WIN	无	无
FN+→	灯光速度变慢	灯光速度变慢	极限档位时上下左右灯闪烁3次指示
FN+←	灯光速度加快	灯光速度加快	
FN+↑	灯光亮度+	灯光亮度+	
FN+↓	灯光亮度-	灯光亮度-	
FN+<	灯效速度加快	灯效速度加快	
FN+>	灯效速度减慢	灯效速度减慢	

产品质保

- 感谢您对EPOMAKER x Feker产品的信任和支持, 为了让您放心使用产品, 更好的保证您的权益。我们将严格遵守并执行相关规定, 实行售后。
- 服务有效期: 自购买之日起质量保证12个月, 终生维护, 配件不在保修范围内;
 - 服务内容: 按机型计算机商品维修更换退货责任规定进行服务;
 - 不属于服务范围:
 - 已超出有效服务或免费维修期的;
 - 未按照正确说明使用、维护、保管导致故障或损坏的;
 - 由于不可抗力(如自然灾害等)原因造成的产品之不良;
 - 人为因素导致产品不良(如操作失误, 磕碰, 进水, 输入不合适电压等);
 - 一切人为损坏、自行拆机、拆封标、使用不当等, 不在保修范围。

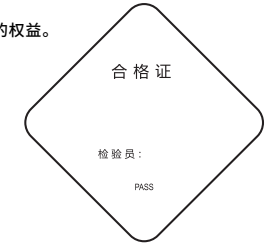


质保卡

产品型号: _____
购买日期: _____
客户姓名: _____
联系电话: _____
联系地址: _____ 执行标准: GB/T 14081-2010

Galaxy80 Product parameters

Product brand: EPOMAKER x Feker
Product Name: Galaxy 80
Product structure: Leaf spring gasket structure
Product size: 365.3x136.1x32.3mm
Product weight: ≈ 1710g
Number of keys: 88Keys
Battery capacity: 4000mAh
Connection method: Wired USB/Bluetooth/2.4G
Wire length: 1.8M
Interface: Keywire separation type C interface
Matrix: Full key no impact
Backlight: Full color RGB, 19 sets of lighting effects
Compatibility: Windows 7/8/9/10/11/Mac/Linux/Android/iOS

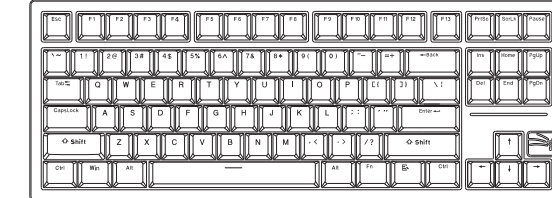

Galaxy80 Indicator light description

- MAC mode: Switch to MAC mode, keyboard backlight flashes blue once
- WIN mode: Turn the switch to Win mode, and the keyboard will flash green once
- ON mode: Turn on the keyboard power and enter wireless mode
- OFF mode: Turn off the keyboard power and enter wired mode
- CAPS indicator light: CAPS key white light indication
- Lock win indicator light: WIN key white light indication
- Code indicator light: Bluetooth 1 blue light/Bluetooth 2 green light/Bluetooth 3 red light/2.4G yellow light
- Light Bar: Default RGB Streaming
- Mode connection indicator light:

Indicator light settings	Reconnection	Pair	Connection successful
BT1	Horizontal light strip Blue slow flashing	Blue slow flashing	Always on for 3 seconds and then off
BT2	Horizontal light strip Green slow flashing	Green slow flashing	Always on for 3 seconds and then off
BT3	Horizontal light strip Red slow flashing	Red slow flashing	Always on for 3 seconds and then off
2.4G	Horizontal light strip Yellow light flashing slowly	Yellow light flashing slowly	Always on for 3 seconds and then off

10. Charging/system switching indicator light:

Indicator light settings		Indication method
Low electricity	FN indicator light	Red light flashing fast
Charging	FN indicator light	The red light is constantly on and charging begins
Full of	FN indicator light	After being fully charged, the green light will remain on for 60 seconds before entering the default running light effect
Mac/Win system switching	Keypad backlight	MAC mode: Switch to MAC mode, keyboard backlight flashes blue once WIN mode: Switch to WIN mode, keyboard backlight flashes green once

11. Low battery indication:

In wireless mode, when the battery is detected to be below or equal to 3.1V, it enters the shutdown state. When wired charging is plugged in, normal use can be restored. When the battery is greater than or equal to 3.3V, it can be used normally.

Galaxy80 F13 Function Description

F13 key function definition: by default, F13 key function can drive user-defined function.

Galaxy80 Explanation of Sleep Mechanism

- Deep Sleep: After 30 minutes of keyless operation on the keyboard, it will be in deep standby mode. Bluetooth will be disconnected and in sleep mode. Press any button to wake up the keyboard backlight and reconnect to Bluetooth.
- Power saving sleep: After 5 minutes of keyless operation on the keyboard, the backlight will turn off. Press any button to wake up the keyboard backlight and reconnect to Bluetooth.

Galaxy80 Lighting effect description

- After power-on, the light is bright and white running around the keyboard, the tail is off, and after running all the keys, the light state before power failure is restored.
- Lighting mode lighting order according to the table from top to bottom, finally cut the mode after OFF.
- 19 sets of lighting effects

Galaxy80 Mode Connection Description

- Wired connection
When the switch is turned to the OFF position, it is in wired connection mode;
Wired mode, toggle the switch to OFF, USB plug and play

2. Wireless Bluetooth connection

When the switch is turned to ON, the Bluetooth connection method is as follows
FN+Q/W/E: After dialing ON on the keyboard, press and hold the FN+Q/W/E combination key to enter Bluetooth mode. Long press the FN+Q/W/E combination key for 3 seconds, and the keyboard will enter pairing mode. The blue/green/red indicator light will flash quickly, and when connected, point to it
The indicator light stays on for 2 seconds, and after 30 seconds of not being able to find the paired device, the exit code matching mode light goes off, and the keyboard enters sleep.

3. 2.4G wireless connection

Insert the included 2.4G wireless receiver into the USB connection port of the computer host, and then turn the side switch of the keyboard to wireless connection mode to connect and use it without a drive; (Mandatory code matching function is required)
FN+R: After dialing ON on the keyboard, press FN+R to enter 2.4G mode, then press the FN+R combination key for 3 seconds to enter pairing mode. After inserting the receiver, the indicator light will flash quickly. After successful pairing, exit pairing. The mode light stays on for 3 seconds, and if the paired device cannot be found for 20 seconds, the exit code matching mode light will turn off, and the keyboard will enter sleep. Short press to switch devices

Note: Connecting a USB cable in any wireless mode can charge the device

Galaxy80 Button composite function description

Combination buttons	WIN function	MAC function (single press trigger)	Describe
FN+F1	This computer	Screen brightness decrease	Flip the switch to select MAC/WIN
FN+F2	Homepage	Screen brightness increase	
FN+F3	Calculator	Multi task controller	
FN+F4	Mailbox	Program List	
FN+F5	Player	Nothing	
FN+F6	Stop playing	Nothing	
FN+F7	Previous song	Previous song	
FN+F8	Play/Pause	Play pause	
FN+F9	Next song	Next song	
FN+F10	Mute	Mute	
FN+F11	Volume -	Volume -	Keyboard backlight flashing three times indicates white light
FN+F12	Volume +	Volume +	
FN+BAKSPACE	Long press for 3 seconds to reset	Long press for 3 seconds to reset	Order: Colorful, Red, Orange, Yellow, Green, Green, Blue, Purple, White
FN+	Keyboard backlight color switching	Keyboard backlight color switching	

Combination buttons	WIN function	MAC function (single press trigger)	Describe
FN+Enter	Keyboard backlight effect switching	Keyboard backlight effect switching	18 lighting effects, default to follow the flow
FN+Right Shift	Switching indicator light effects	Switching indicator light effects	Light wave, running horse, off, constant brightness, breathing, neon, default light wave
FN+Space bar	Check battery level (valid battery power in wireless mode)	Check battery level (valid battery power in wireless mode)	Press the combination key Fn+space, the backlight will turn off, and the number keys 1 to 0 will light up to display the proportion of battery, for example: 1 is on, indicating 10% battery, 1 and 2 are on, indicating 20% battery. And so on. (Red below 30%, yellow below 50%, green above 50%).
FN+T	Keyboard backlight switch	Keyboard backlight switch	With memory
FN+WIN-L	Lock WIN	—	—
FN+→	Light speed slows down	Light speed slows down	

Combination buttons	WIN function	MAC function (single press trigger)	Describe
FN+←	Accelerated lighting speed	Accelerated lighting speed	When in the extreme gear position, the up, down, left, and right lights flash three times to indicate
FN+↑	Light brightness+	Light brightness+	
FN+↓	Light brightness-	Light brightness-	
FN+<	Accelerated lighting speed	Accelerated lighting speed	
FN+>	Slow down light effect speed	Slow down light effect speed	