

 
EPOMAKER GLOW 75

说明书尺寸:170X120mm

材质:128g双铜纸+亚膜

印刷:单黑双面印刷(骑马钉)

EPOMAKER GLOW 75

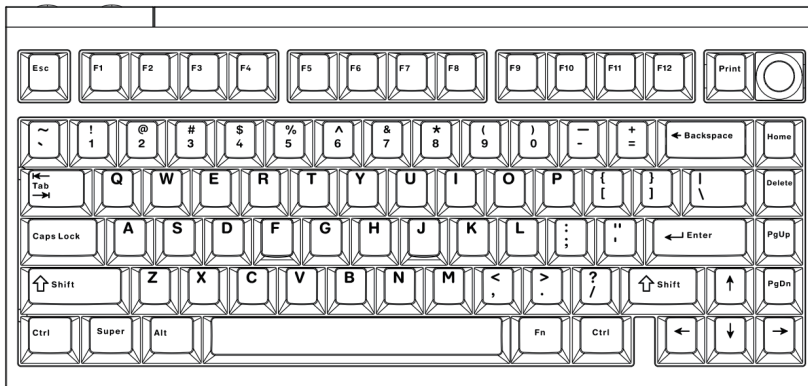

75% Aluminum Leaf-spring Hot-swappable RGB 2.4Ghz / Bluetooth / Type-C Mechanical Keyboard Barebones Kit

Should you require more assistance, please email us at support@epomaker.com



Made in China

Manufacturer: Shenzhen Changyun Technology Co., Ltd.
Address: Seventh Floor, Kai Daer Building, No.168 Tongsha Road,
Xili Street, Nanshan District, Shenzhen, Guangdong, CN
Email: support@epomaker.com
Web: www.epomaker.com

EC REP

UK REP

APEX CE SPECIALISTS GMBH

Habichtweg 141468 Neuss Germany
Contact: Wells Yan E-mail: info@apex-ce.com

APEX CE SPECIALISTS LIMITED

89 Princess Street, Manchester, M1 4HT, UK
Contact: Wells Yan E-mail: info@apex-ce.com



Points de collecte sur www.quefaire-demmesdechets.fr

WARNING

Choking Hazard
Small Parts
Keep away from children
and pets

FUNCTION KEYS

	Windows	Mac / iOS
FN + F1	My Computer	Screen Brightness -
FN + F2	Homepage	Screen Brightness +
FN + F3	Calculator	Task Center
FN + F4	Mail	Apps List
FN + F5	Multimedia Player	/
FN + F6	Stop	/
FN + F7	Previous Track	Previous Track
FN + F8	Play/Pause	Play/Pause
FN + F9	Next Track	Next Track
FN + F10	Mute	Mute
FN + F11	Volume -	Volume -
FN + F12	Volume +	Volume +

FUNCTION KEY COMBINATIONS

Fn + Backspace
(Hold 3s) Reset the Keyboard to the Factory Setting

Fn + Q / W / E
(Hold 3s) Pair Bluetooth 1/2/3 Connection

Fn + R Hold to pair 2.4G Connection

Fn + Del Confirm Screen Options

Fn + PgUp Screen Page Up

Fn + PgDn Screen Page Down

Fn + I Display Image on Screen

Fn + Win
(Only for Windows Mode) Lock/unlock Win key

LIGHT

Fn + T Turn On/Off Backlights

Fn + Enter Toggle Backlight Effects

Fn + \ | Toggle Backlight Colors

Fn + ↑ Backlights Brightness +

Fn + ↓ Backlights Brightness -

Fn + ← Backlights Speed-

Fn + → Backlights Speed +

Fn + Home Toggle Lightbar Colors

Fn + Right Shift Toggle Lightbar Effects

PAIRING BLUETOOTH (SWITCH TO ON)

Toggle the switch to ON:

1. Press and hold Fn+Q/W/E for 5s till the Q/W/E indicator blinks fast, the keyboard is ready to pair.
2. Turn on your Bluetooth device and find “Glow75-1/2/3”, then connect. When the indicator stays for 3s, the connection is done.
3. Short press Fn+Q/W/E to toggle among the three Bluetooth channels.

PAIRING WIRELESS 2.4GHZ (SWITCH TO ON)

1. Press and then hold Fn+R for 5s till the R indicator blinks fast, the keyboard is ready to pair.
2. Insert the 2.4G dongle to your device. When the dongle sign in the display is on, the keyboard is connected.

WIRED MODE (SWITCH TO OFF)

Toggle the switch to OFF, plug the keyboard and the connection is done.


SPECS

BRAND:	EPOMAKER
MODEL:	Glow75
KEY AMOUNTS:	82 Keys
KNOB MATERIAL:	1.14' TFT
MOUNTING TYPE:	Leaf-spring Gasket
STABILIZER TYPE:	Plate-mounted
CASE MATERIAL:	Aluminum
PLATE MATERIAL :	Flex-cut PC
PCB TYPE:	3/5-pin Hotswap PCB
CONNECTIVITY:	Type-C Wired, Bluetooth, 2.4G Dongle
ANTI-GHOST KEY:	NKRO in all modes
POLLING RATE:	1000hz in USB & 2.4G mode; 125hz in Bluetooth
BATTERY CAPACITY:	8000mAh
BACKLIGHT:	RGB, South-facing LEDs
OS COMPATIBILITY:	Windows/Android/Mac/iOS
DIMENSION:	323 x 148 x 43.2 mm
WEIGHT:	Around 2.2kg



REPLACING KEYCAPS AND SWITCHES

 For a full guide on how to remove keycaps and switches scan the QR Code or type in your browser:
<https://epomaker.com/blogs/guides/diy-guide-how-to-remove-and-replace-your-mechanical-keyboard-switches>

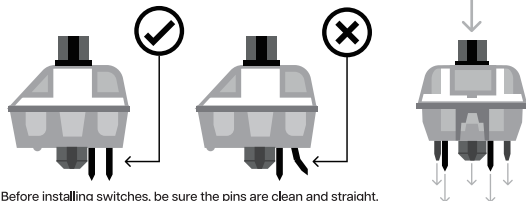

Push Straight Down

Please be gentle. Be sure the pins are aligned with the slots.

Before installing switches, be sure the pins are clean and straight.

Included Tools

 
Keycap Puller



Switch Puller

Mechanical Switch

Example of a switch as seen from top after you remove the keycap to prepare for switch removal.

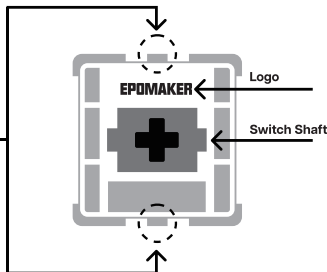

The Switch Puller tool aligns Vertically to the Switch to unclip the plastic securing the switch to the plate.

Remove Switches

1. Grab your Switch Removal Tool and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the example graphic above.
2. Grab the switch with the Switch Puller and apply pressure until the switch releases itself from the plate.
3. Using firm but gentle force pull the switch away from the keyboard using a vertical motion.

Install Switches

1. Check that all the switch metallic pins are perfectly straight and clean.
2. Align the switch vertically to have the Gateron logo facing north. The pins should align themselves to the keyboard PCB.
3. Press the switch down until you hear a click. This means your switch clips have attached themselves to the keyboard plate.
4. Inspect the switch to ensure it's properly attached to your keyboard, and test it.



Note: If the key doesn't work it's possible you may have bent one of the switches while installing it. Pull the switch out and repeat the process. Pins may be damaged beyond repair and need replacement if this process is not done correctly. Never apply excessive force when replacing keycaps or switches. If you cannot remove or install keycaps or switches please contact customer service as soon as possible to avoid damage to the keyboard due to operating errors.

TECHNICAL ASSISTANCE

For technical assistance, please email to support@epomaker.com with your purchase order number and a detailed description of your issue.

We normally respond to enquiries within 24 hours. If you purchased your keyboard from a distributor or not from any official store of Epomaker, please contact them directly for any additional help.

Instagram



TikTok



Facebook



Discord



YouTube



X



 
WARRANTY

EPOMAKER's Warranty covers any factory defects that might affect the proper functionality of your purchase. It doesn't cover any damage that may occur from normal wear and tear. If your product is defective we will send you a replacement unit. Replacement units might require you to send the defective unit back to Epomaker.

We provide a 1 year warranty for our products when bought from our website (EPOMAKER.com). Your item will not be covered by your 1 year warranty if the inspection shows any sign of modification or changes unsupported by the original product, these include: Changing internal components, Assembling and reassembling the product, Replacing Batteries, etc.

We will ONLY cover the item if it is bought from our official stores. You do not have a warranty with us if you bought the item from another reseller or likewise. Please contact the store that you bought your product from to resolve issues.

EPOMAKER GLOW 75

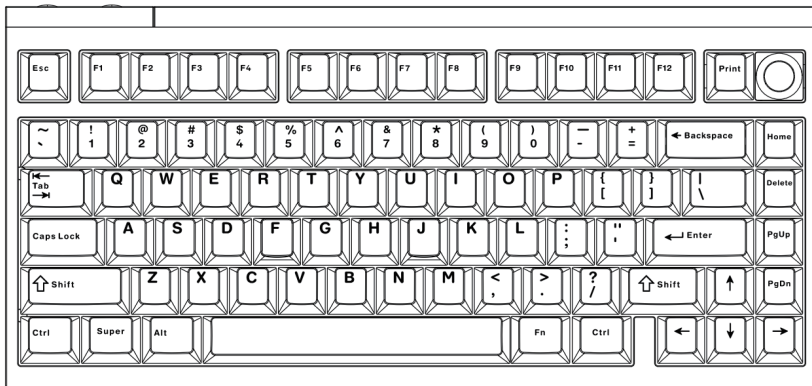

75% 铝坨坨板簧Gasket热插拔RGB 2.4Ghz / 蓝牙 / Type-C 机械键盘套件

如果您需要更多的帮助，请给我们发电子邮件：support@epomaker.com。



Made in China
Manufacturer: Shenzhen Changyun Technology Co., Ltd.
Address: Seventh Floor, Kai Daer Building, No.168 Tongsha Road,
 Xili Street, Nanshan District, Shenzhen, Guangdong, CN
Email: support@epomaker.com
Web: www.epomaker.com

EC REP

UK REP

APEX CE SPECIALISTS GMBH
 Habichtweg 1 41468 Neuss Germany
 Contact: **Wells Yan** E-mail: info@apex-ce.com

APEX CE SPECIALISTS LIMITED
 89 Princess Street, Mancheste, M1 4HT, UK
 Contact: **Wells Yan** E-mail: info@apex-ce.com



Points de collecte sur www.quefairedelesdechets.fr

警告

**窒息危险
小部件**
 远离儿童和宠物

F区组合键

	Windows	Mac
FN + F1	此电脑	屏幕亮度 -
FN + F2	主页	屏幕亮度 +
FN + F3	计算器	多任务控制器
FN + F4	邮箱	程序列表
FN + F5	播放器	/
FN + F6	停止播放	/
FN + F7	上一曲	上一曲
FN + F8	播放/暂停	播放/暂停
FN + F9	下一曲	下一曲
FN + F10	静音	静音
FN + F11	音量 -	音量 -
FN + F12	音量 +	音量 +

功能组合键

Fn + Backspace (按住3s)	键盘恢复出厂设置
Fn + Q / W / E (按住 3s)	长按连接蓝牙1/2/3



Fn + R	长按连接2.4G
Fn + Del	确认显示屏功能
Fn + PgUp	屏幕向翻页
Fn + PgDn	屏幕向下翻页
Fn + I	屏幕显示图片
Fn + Win (仅在Windows系统内)	锁/解Win键

灯光


Fn + T	打开/关闭背光灯
Fn + Enter	切换背光灯效
Fn + \ 	切换背光灯颜色
Fn + ↑	背光灯亮度 +
Fn + ↓	背光灯亮度 -
Fn + ←	背光灯速度 -
Fn + →	背光灯速度 +
Fn + Home	切换灯带灯效
Fn + Right Shift	切换灯带颜色

配对蓝牙（开关拨至ON）		参数		CN
右上角的开关拨到ON： 1. 按下再长按Fn+Q/W/E 5秒至相应按键指示灯快闪，键盘进入蓝牙配对模式； 2. 打开你的蓝牙连接设备找到“Glow75-1/2/3”连接。键盘连上后指示灯停止闪烁。 3. 短按Fn+Q/W/E在3个蓝牙通道之间切换。		品牌:	EPOMAKER	
		型号:	Glow75	
		键数:	82 键	
		屏幕:	1.14' TFT	
		结构:	板簧Gasket结构	
		卫星轴类型:	钢板卫星轴	
		外壳材质:	金属铝	
		定位板材质:	开槽PC	
配对无线 2.4GHZ（开关拨至ON）		PCB类型:	3/5脚热插拔 PCB	
1. 按下长按Fn+R 5秒至相应按键指示灯快闪 2.将2.4G接收器插入电脑USB口。		连接方式:	Type-C有线、蓝牙、2.4G无线	
		无冲键:	所有模式下全键无冲	
		上传回报率:	有线模式1000hz；2.4G模式1000hz； 蓝牙模式125hzmod	
有线模式（开关拨至OFF）		电池容量:	8000mAh	
		背光灯:	RGB，下灯位	
		操作系统:	Windows/Android/Mac/iOS	
		尺寸:	323 x 148 x 43.2 mm	
右上角的开关拨到USB模式，插线后连接成功。		重量:	Around 2.2kg	




更换轴与键帽

 扫描二维码或登录网址查看拔插键帽与轴的完整说明书。<https://epomaker.com/blogs/guides/diy-guide-how-to-remove-and-replace-your-mechanical-keyboard-switches>

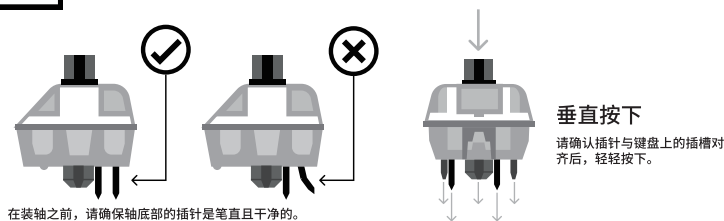

在装轴之前，请确保轴底部的插针是笔直且干净的。

 随附工具

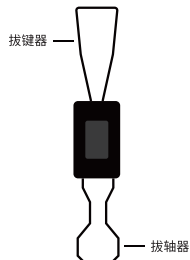


拔除轴体

1. 拿起拔轴器，将拔轴器的尖端垂直，对准轴体上下两端的轴体开关（开关位于轴体中轴线上，即图例中部位）。
2. 用力夹紧轴体开关，保持拔轴器与轴体垂直，用适当的力度将拔轴器向上提。
3. 像使用镊子一样，将轴从板上拔出。

机械轴

 将键盘上的键帽拆除后，可看到如图所示的机械轴。

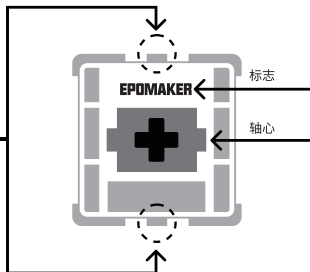

请将拔键器的尖端对准轴体上下两端的轴体开关，用力夹紧开关，像使用镊子一样将轴拔出。

安装轴体

1. 检查轴体底部的插针，确保插针竖直无弯曲，干净无脏污。
2. 将轴体垂直于套件，让插针对准套件PCB板上的插孔。如果键盘是下灯位键盘（LED灯位于正南），则此时Gateron的标志应位于正上方（正北方）。反之亦然。
3. 将轴轻轻按下，当轴体正确插入时，您会听到一声轻轻的咔哒声。
4. 检查并测试轴体是否安装稳妥。



注意：如果您在插拔轴体的过程中不慎将轴体底部插针弯曲，则键盘按键将无法正常工作。此时请将轴体拔出，将插针将平并还原为竖直状态，重新插入套件。

如在插拔过程中操作不当，则插针可能会被损坏且无法修复。在安装轴体和键帽时，请不要过度用力。安装过程中禁止使用暴力插拔。如您安装过程中有任何疑问，请立即联系客服，避免因操作不当损毁产品。

技术支持

如您需要帮助或技术支持，请发送邮件至support@epomaker.com。邮件中请提供您的订单号和问题的详细说明。

我们通常会在收到邮件后24小时内回复您。

如果您的产品是从除了Epomaker官方店铺以外的其他经销商处购买，请直接联系将产品出售给您的经销商。

Instagram



TikTok



Facebook



Discord



YouTube



X



社区论坛

Epomaker的保修政策适用于因工厂缺陷而导致您购买的产品无法正常使用的情况。该保修政策不适用于任何因正常使用而引发的产品故障或产品磨损。如您购买的产品有工厂制造缺陷，我们会为您提供替换品。在提供替换品前，您需要将您持有的故障品寄回给我们。

Epomaker为在官网上（epomaker.com）购买的键盘提供1年的保修服务。未经官方授权的修改/修复/改造/调整过的产品无法享有保修或退换服务，修改/修复/改造/调整包括但不限于：更换内部配件、自行拆开或组装、更换电池等。

我们仅为在我们官方商店购买的商品提供售后保障服务。如您从其他零售商处购买，则我们无法为您提供相应的售后保障服务。当您遇到售后问题时，请直接联系将产品销售给您的零售商。