FEKER

User Manual

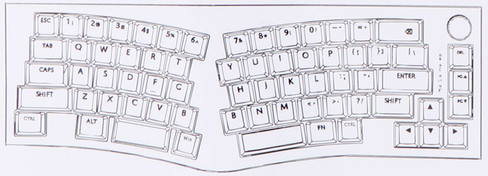

Alice - 80

Alice Ergonomic Gasket Keyboard

Swtich & USB Function



Mac For Mac system used , key-function shift to for Mac computer or iPAD;

Win For Windows system used , key-function shift to for standard Windows computer;

On For Wireless version used, including the 2.4 and 3 bluetooth mode;

Off For Wired version used, in the same time ,you need insert the Type-C cable to device and USB to computer ;

Type-C Type-C cable insert here and USB connect to computer for connect to computer ; and Type-C cable insert here and USB connect to power adaptor for charge only.

Interface Connected Function

USB Version

1: Connect the USB-A port to computer USB port and Connect the Type-C port to keyboard;

2: Press the Fn and N key for enter to wired USB device mode.

Wireless 2.4G Version

1: Connect the USB-A port to computer USB port and Connect the Type-C port to keyboard;

2: Press the Fn and G key for enter to 2.4G device mode;

3: If your want used this 2.4g device , you need connect the receiver to USB port of computer first, that's important ;

Or (the other's solution)

1: Switch the ON/OFF button to ON , and Make sure the battery is available ;

2: Press the Fn and G key for enter to 2.4G device mode;

3: If your want used this 2.4g device , you need connect the receiver to USB port of computer first, that's important ;

Wireless BT Version

1: Connect the USB-A port to computer USB port and Connect the Type-C port to keyboard;

2: Press the Fn and C/V/B key for enter to BT device Alice-1/2/3 mode, one by one;

3: Long press 3 seconds for pairing to new device by bluetooth ;

4: Press 1 time for re-connected to paired device by bluetooth ;

5: Press the Fn + C/V/B 1 time, You can switch between Alice-1/2/3 device;

FN+ Keys Function

	For Windows		For Mac	
	Function Key	Function	Function Key	Function
	Esc	` ~	Esc	` ~
	1!	F1	1!	Screen brightness decrease
	2@	F2	2@	Screen brightness increase
	3#	F3	3#	Multitask controller
	4$	F4	4$	Program listing
	5%	F5		
	6^	F6		
	7&	F7	7&	Previous track
	8*	F8	8*	Play & pause
	9(	F9	9(	Next track
	0)	F10	0)	Mute
	-_	F11	-_	Volume increase
	=+	F12	=+	Volume decrease
	Win	Win Lock&Unlock		
	\\\|	Backlight colour change	\\\|	Backlight colour change
	Del	Backlight mode change	Del	Backlight mode change
Fn +	I	Ins	I	Ins
	P	Prs	P	Prs
	L	Backlight On&Off Switch	L	Backlight On&Off Switch
	?/	My calculator	?/	My calculator
	M	Mute	M	Mute
	<,	Volume down	<,	Volume down
	>.	Volume up	>.	Volume up
	W	Directional keys interchange	W	Directional keys interchange
	Backspace	Press 3 s for reset	Backspace	Press 3 s for reset
	Page up	Home		
	Page down	End		
	;:	Lighting flow velocity down		
	'"	Lighting flow velocity up		
	▶	Lighting flow direction to right	▶	Lighting flow direction to right
	◀	Lighting flow direction to left	◀	Lighting flow direction to left
	▲	Lighting brightness increase		
	▼	Lighting brightness decrease		
	C	BT device Alice-1		
	V	BT device Alice-2		
	B	BT device Alice-3		
	G	2.4 G device		
	N	Wired USB device		

Battery status indicator Function

On keyboard , the right side of CTRL key's LED lighting is for indicator of battery status.

Low battery the right side of CTRL key's LED will lighting RED flash.

Charging Press 3seconds Fn and the right side of CTRL key, LED will lighting BLUE.

Full charge Press 3seconds Fn and the right side of CTRL key, LED will lighting GREEN.

Battery is dead the right side of CTRL key's LED will lighting RED continuous.

Device name description

USB Version FEKER Alice80

2.4G Version Wireless Gaming Keyboard

BT Version FEKER Alice-1
FEKER Alice-2
FEKER Alice-3

Electrical Specifications (for reference only)

Version	Item	Current(data)
USB	Wired constant lighting mode	≤ 260 mA
	Wired constant Un-lighting	≤ 10 mA
2.4G	2.4G constant lighting mode	≤ 380 mA
	2.4G sleep mode	≤ 0.02 mA
Bluetooth	BT constant lighting mode	≤ 380 mA
	BT sleep mode	≤ 0.02 mA
Charge	Recharging mode	≤ 450 mA

System Requirement

Compatible with Windows 2000 and above and Mac system.