FEKER

User Manual

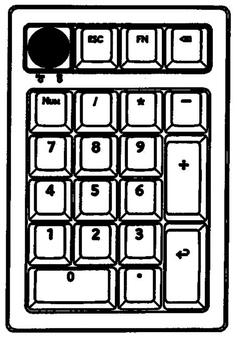

Model No. : JJK-21

3 Mode Gasket Key Pad

Swtich & USB Function

On For Wireless version used, including the 2.4 and 3 bluetooth mode;

Off For Wired version used, in the same time ,you need insert the Type-C cable to device and USB to computer ;



Type-C Type-C cable insert here and USB connect to computer for connect to computer ; and Type-C cable insert here and USB connect to power adaptor for charge only.

Interface Connected Function

USB Version

1: Connect the USB-A port to computer USB port and Connect the Type-C port to keyboard;
2: When the USB cable is completed , the USB device will working default by system.

Wireless 2.4G Version

1: Connect the USB-A port to computer USB port and Connect the Type-C port to keyboard;
2: Press the Fn and 4 key for enter to 2.4G device mode;
3: If your want used this 2.4g device , you need connect the receiver to USB port of computer first, that's important ;

Or (the other's solution)

1: Switch the ON/OFF button to ON , and Make sure the battery is available ;
2: Press the Fn and 4 key for enter to 2.4G device mode;
3: If your want used this 2.4g device , you need connect the receiver to USB port of computer first, that's important ;

Wireless BT Version

1: Connect the USB-A port to computer USB port and Connect the Type-C port to keyboard;
2: Press the Fn and 1/2/3 key for enter to BT device FEKER JJK21-1/2/3 mode, one by one;
3: Long press 3 seconds for pairing to new device by bluetooth ;
4: Press 1 time for re-connected to paired device by bluetooth ;
5: Press the Fn + 1/2/3 one time, You can switch between FEKER JJK21-1/2/3 device;

FN+ Keys Function

Fn key	Function key	Key Function
Fn +	Esc	Open Calculator
	. Del	Backlighting colour cycle
	Backspace	Backlighting mode switch
	9	Backlighting flow velocity up
	7	Backlighting flow velocity down
	+	Backlighting brightness increase
	Enter	Backlighting brightness decrease
	1	BT device FEKER JJK21-1
	2	BT device FEKER JJK21-2
	3	BT device FEKER JJK21-3
	4	2.4 g device

System Requirement

Compatible with Windows 2000 and above and Mac system.

Battery status indicator Function

On The PAD , the Number 0 key's LED lighting is for indicator of battery status.

Low battery the Number 0 key's LED will lighting RED flash.

Charging Press 3seconds Fn and Number 0 key, LED will lighting BLUE.

Full charge Press 3seconds Fn and Number 0 key, LED will lighting GREEN.

Battery is dead the Number 0 key's LED will lighting RED continuous.

Device name description

USB Version FEKER PAD JJK21

2.4G Version 2.4G Wireless Device

BT Version FEKER PAD JJK21-1
FEKER PAD JJK21-2
FEKER PAD JJK21-3

Electrical Specifications (for reference only)

Version	Item	Current(data)
USB	Wired constant lighting mode	≤ 110 mA
	Wired constant Un-lighting	≤ 8 mA
2.4G	2.4G constant lighting mode	≤ 50 mA
	2.4G sleep mode	≤ 0. 01 mA
Bluetooth	BT constant lighting mode	≤ 50 mA
	BT sleep mode	≤ 0. 01 mA
Charge	Recharging mode	≤ 450 mA

FEKER

用户手册

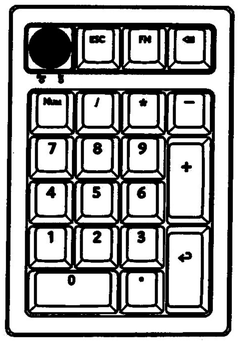

型号：JJK-21

3 模Gasket结构数字键盘

波动开关与USB接口功能

On 波动此开关，实现在无 USB 连接的状态下，打开无线的工作模式 ；

Off 波动此开关，实现在无 USB 连接的状态下，关闭机器的电源 ;当在USB连接的状态下，波动此开关，无实际功能；

Type-C USB 线材正常的连接到键盘和电脑端，可以实现USB 键盘工作与给键盘电池充电功能 ；当USB线材另一端连接到手机类充电器电源上，则实现给电池充电功能。

三种模式的连接功能

USB 模式

1、将USB线材的USB头插入到电脑端的USB接口上，同时，将Type-C插头插入到本键盘的Type-C接口上 ；
2、键盘USB接通后，键盘的工作模式默认切换至USB 模式下工作。

无线2.4G模式

1、将USB线材的USB头插入到电脑端的USB接口上，同时，将Type-C插头插入到本键盘的Type-C接口上 ；
2、键盘USB接通后，同时按下 FN 和 4 键，将键盘的工作模式切换至无线2.4G模式下工作；
3、使用无线2.4G模式，首先需要将随机配送的USB接收器 正确的插入到电脑的USB接口上；

或者，（另一种实现方式）

1、在确保你的键盘内置锂电池有充足的电源情况下，波动ON/OFF开关至ON的状态下；
2、同时按下 FN 和 4 键，将键盘的工作模式切换至无线2.4G模式下工作；
3、使用无线2.4G模式，首先需要将随机配送的USB接收器 正确的插入到电脑的USB接口上；

无线蓝牙模式

1、将USB线材的USB头插入到电脑端的USB接口上，同时，将Type-C插头插入到本键盘的Type-C接口上 ；
2、键盘USB接通后，同时按下 FN 和 1/2/3 键，将键盘的工作模式切换至无线蓝牙模式下的FEKER JJK21 -1/2/3三个频道下工作（最多可以同时蓝牙连接3台设备）；
3、长按3秒 FN 和 1/2/3 键，可以实现与新的设备间的蓝牙连接、配对；
4、按压一次 FN 和 1/2/3 键，可以实现与已蓝牙连接、配对的设备进行回联；
5、按压 FN 和 1/2/3 键，可以实现与已蓝牙连接、配对的设备间进行来回切换；

复合功能键说明

Fn 键	功能键	实现的功能
Fn +	Esc	打开计算器
	. Del	背光灯的颜色循环切换
	Backspace	背光灯的模式的切换
	9	背光灯流动速度的增加
	7	背光灯流动速度的降低
	+	背光灯亮度的增加
	Enter	背光灯亮度的降低
	1	蓝牙设备 FEKER JJK21-1
	2	蓝牙设备 FEKER JJK21-2
	3	蓝牙设备 FEKER JJK21-3
	4	2.4 g 设备

电量状态指示功能

键盘上的 0 字键 底部的LED灯，将作为电量状况指示灯使用 ；

电量低 当键盘的电量为低电量时，0 字键指示为红灯闪烁，提示需要充电 ；

充电中 当键盘正在充电时，长按3秒 FN 和 0 字键，指示为蓝灯长亮 ；

充电完成 当键盘正在充电时，长按3秒 FN 和 0 字键，指示为绿灯长亮 ；

电量耗尽 当键盘的电量为超低时，0 字键指示为红灯亮起，设备停止工作 ；

三种模式下设备名称

USB 模式 FEKER PAD JJK21

2.4G 模式 2.4G Wireless Device

蓝牙模式 FEKER PAD JJK21-1
FEKER PAD JJK21-2
FEKER PAD JJK21-3

基本电性规格参数

模式	项目	电流（数据）
USB	USB 亮灯工作模式下	≤ 110 mA
	USB 关灯工作模式下	≤ 8 mA
2.4G	2.4G亮灯工作模式下	≤ 50 mA
	2.4G待机模式下	≤ 0. 01 mA
蓝牙	蓝牙亮灯工作模式下	≤ 50 mA
	蓝牙待机模式下	≤ 0. 01 mA
充电	充电模式	≤ 450 mA

工作系统要求

Windows 要求在Windows2000或以上的版本系统下工作

Windows 要求在Mac 10. 5. 1 或以上的版本系统下工作
IOS 10. 1 或以上的版本系统下工作效果会更佳